


01.2023

## PSM 1.0

en-GB

### Operating instructions

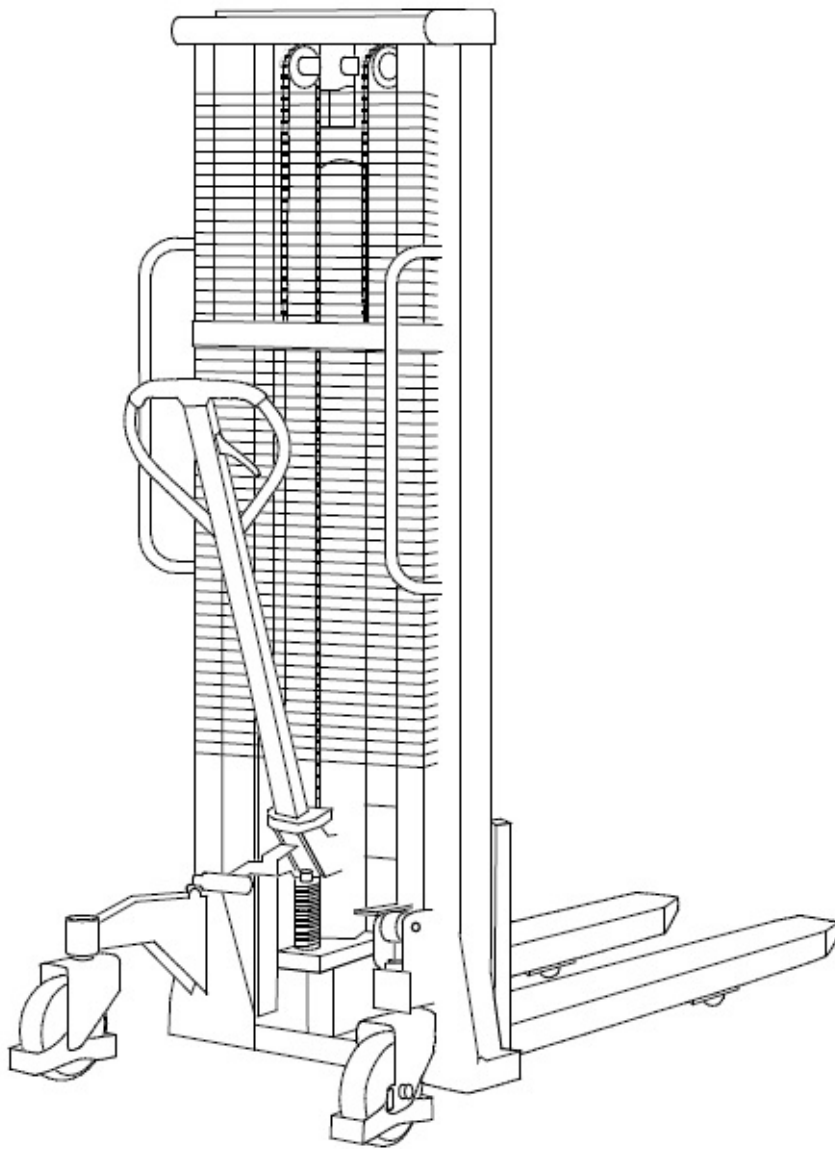

# Copyright

This document must not be distributed or reproduced, not even in part.

Copyright of this document remains with Jungheinrich PROFISHOP AG & Co. KG.

Haferweg 24

22769 Hamburg, Germany

For service enquiries and orders

## **Germany**

0800 / 558833 - 4

[service@jh-profishop.de](mailto:service@jh-profishop.de)

## **International**

[service@jungheinrichshop.com](mailto:service@jungheinrichshop.com)

# Contents

|          |                                                        |           |
|----------|--------------------------------------------------------|-----------|
| <b>A</b> | <b>About this manual .....</b>                         | <b>5</b>  |
| 1        | Scope and target group .....                           | 5         |
| 2        | Information and instructions .....                     | 6         |
| <b>B</b> | <b>Security .....</b>                                  | <b>7</b>  |
| 1        | Correct Use and Application .....                      | 7         |
| 2        | Duties of individuals .....                            | 8         |
| 3        | Safety information for specific operating phases ..... | 9         |
| 3.1      | Transport .....                                        | 9         |
| 3.2      | Operation .....                                        | 9         |
| 3.3      | Maintenance .....                                      | 11        |
| 4        | Conversions and modifications .....                    | 12        |
| 5        | Residual risks .....                                   | 12        |
| <b>C</b> | <b>Structure and function .....</b>                    | <b>13</b> |
| 1        | Controls .....                                         | 15        |
| 2        | Marking and labelling .....                            | 17        |
| 2.1      | Warning and information signs .....                    | 17        |
| 2.2      | Data plate .....                                       | 18        |
| 2.3      | Lastdiagramm/Tragfähigkeit .....                       | 19        |
| <b>D</b> | <b>Technical Specifications .....</b>                  | <b>20</b> |
| 1        | Dimensions .....                                       | 20        |
| 2        | Performance data .....                                 | 21        |
| <b>E</b> | <b>Commissioning and transport .....</b>               | <b>22</b> |
| 1        | Using the Truck for the First Time .....               | 22        |
| 2        | Transport .....                                        | 22        |
| 2.1      | Attaching the device .....                             | 22        |
| 2.2      | Securing the device .....                              | 23        |
| <b>F</b> | <b>Operation .....</b>                                 | <b>24</b> |
| 1        | Checking the device before daily use .....             | 24        |
| 2        | Raising the load .....                                 | 25        |
| 3        | Moving the load .....                                  | 26        |
| 4        | Lowering the load .....                                | 27        |
| 5        | Braking the device .....                               | 27        |
| 6        | Applying the parking brake .....                       | 28        |
| 7        | Parking the device .....                               | 28        |
| <b>G</b> | <b>Maintenance and repair .....</b>                    | <b>29</b> |
| 1        | Faults and troubleshooting .....                       | 29        |
| 2        | Maintenance .....                                      | 31        |
| 2.1      | Maintenance intervals .....                            | 31        |
| 2.2      | Consumables .....                                      | 33        |

|     |                                                                         |    |
|-----|-------------------------------------------------------------------------|----|
| 3   | Repairs.....                                                            | 34 |
| 3.1 | Safety tests to be performed at intervals and after unusual events..... | 34 |
| H   | Shutdown, storage and disposal.....                                     | 35 |
| 1   | Decommissioning.....                                                    | 35 |
| 1.1 | Shutting down the device.....                                           | 35 |
| 1.2 | Returning the device to service after shutdown.....                     | 35 |
| 2   | Storage.....                                                            | 35 |
| 2.1 | Storing the device.....                                                 | 35 |
| 3   | Disposal.....                                                           | 36 |
| 3.1 | Decommissioning the device.....                                         | 36 |
| 3.2 | Disposing of the device.....                                            | 36 |

# A About this manual

These operating instructions describe the correct use of the products listed in the "Scope" chapter – see page 5. All Jungheinrich products are developed and produced according to the current state of the art. However, risks can arise in the case of incorrect use. Please observe the corresponding information and read through the operating instructions carefully. The operating instructions form part of the device and are valid for all specified device versions. The operating instructions describe the safe and correct use of the device in all operating phases.



Any technical questions should be directed to your authorised service partner.

The device described in these operating instructions is an industrial truck that is designed for lifting and transporting loads.

## 1 Scope and target group

### Scope

This document applies to the following device:

- PSM 1.0

### Target groups

For the purposes of these operating instructions the "owner" or "operator" is defined as any natural or legal person who either uses the described device himself or on whose behalf it is used. In special cases (e.g. rental), the owner is considered to be the person who is charged with the specified operational duties in accordance with existing contractual agreements between the owner and operator of the device.

| Target group | Tasks                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Owner        | <ul style="list-style-type: none"><li>– Keep these operating instructions accessible at the usage location of the device, including for later reference.</li><li>– Ensure that the device is used correctly and only by trained and authorised personnel.</li><li>– Instruct employees to read and observe these operating instructions and other applicable documentation, particularly the safety instructions and warnings – see page 7.</li><li>– Observe additional device-specific provisions and regulations.</li></ul> |
| Operator     | <ul style="list-style-type: none"><li>– Read and observe these operating instructions and other applicable documentation, particularly the safety instructions and warnings see page 7.</li><li>– Ensure that the device is used correctly and in accordance with the safety regulations.</li></ul>                                                                                                                                                                                                                            |

*Tab. 1: Owner and operator duties*

## 2 Information and instructions

### General information

- Indicates additional information and explanations.

### Structure of warnings

Warnings are used in this document to highlight potential causes of personal injury or material damage.

- Always read and observe these warnings.
- Follow all measures highlighted by the relevant warning.

The following warning levels are used to reflect the severity and probability of the relevant hazard:

#### **DANGER!**

Indicates an extremely dangerous situation. Failure to observe this warning can lead to serious, irreversible injuries or death.

#### **WARNING!**

Indicates an extremely dangerous situation. Failure to observe this warning can lead to serious, irreversible injuries or death.

#### **CAUTION!**

Indicates a dangerous situation. Failure to observe this warning can lead to minor or moderate injuries.

#### **NOTICE**

Indicates a risk of material damage. Failure to observe this warning can lead to material damage.

### Structure of instructions

Instructions in this document are structured as follows:

#### ***Aim of the described activity***

##### *Requirements*

- Prerequisites for activity

##### *Tools and Material Required*

- Tools and materials required for an activity (optional specification)

- Step
- Step
  - Sub-step

##### *Result of action*

# B Security

The safety chapter provides important information on how to work safely with the described product. Failure to observe the specified measures can result in material damage and injuries, and potentially even death.

- Before commissioning and operating the device: Read the safety chapter thoroughly.
- Use the described device only as specified in this document.

## 1 Correct Use and Application

The device described in these operating instructions is designed for safe transport of heavy loads and is intended for private and commercial use. Any damage resulting from incorrect operation or improper use shall render all liability and warranty claims null and void.

### **Correct environmental conditions**

The device will be permanently damaged if exposed to extreme environmental conditions.

- Only use the device under the permitted conditions – see page 21.
- Do not use the device in areas or environments with high levels of humidity.
- Do not use the device in areas or environments at risk of explosion or fire.
- Do not use the device in very dusty areas or environments.
- Do not use the device in outdoor areas.
- Do not use the device in corrosive areas or environments.
- Do not use the device in temperatures outside the permissible temperature range – see page 21.

### **Possible incorrect use**

Inappropriate use of the device poses a risk of injury and reduces the service life of the device.

The device is not suitable for the following applications:

- Transporting persons
- Transporting loads on slopes or inclines
- Transporting insufficiently secured loads
- Transporting loads that are too heavy or placed on one side
- Moving the device with electrical or mechanical aids
- Picking up pallets from the side

### **NOTICE**

The specified capacity applies only in the case of even load distribution on the load handler.

---

### **Attaching accessories to the device**

Obtain written authorisation from the manufacturer and the responsible authority before attaching accessories to the device.

- The authority's approval does not replace the manufacturer's permission.

## **2 Duties of individuals**

### **Duties of the owner**

Incorrect preparation of the device can result in serious damage or injuries. The owner must:

- Ensure that the device is used as intended.
- Ensure that the device is in perfect technical condition.
- Ensure that all warnings and information signs are present on the device and in a language that the operator understands.
- Replace any damaged or missing warnings and information signs on the device.
- Ensure compliance with all regulations concerning accident prevention, safety and disposal as well as those regarding operation, maintenance and repairs.
- Provide suitable protective equipment for the operator.
- Make the operating instructions available at the usage location.
- Retain test reports for at least 2 years.

### **Duties of the operator**

Irresponsible operation of the device can result in serious damage or injuries. The operator must:

- Provide evidence of his or her ability to use the device.
- Provide evidence of his or her commissioning by the owner or their legal representative.
- Prevent unauthorised use of the device.
- Wear safety shoes or safety equipment in accordance with statutory and operational regulations when operating the device.
- Assume responsibility for the correct use of the device during operation.
- Independently take the device out of service and inform the relevant supervisor(s) in the case of damage to the device during operation.
- Ensure that the load to be picked up is packaged correctly and does not exceed the permitted weight.

## **3 Safety information for specific operating phases**

### **3.1 Transport**

#### **Transporting the device safely**

Incorrectly secured transports can result in material damage and personal injury.

- Remove any load before transporting the device.
- Use lifting gear with sufficient capacity.
- Secure the HGV or trailer against rolling away before loading the device.
- Attach lifting accessories only to the designated attachment points.
- Correctly secure the device to the lashing rings on the HGV or trailer.
- When jacking up, prevent slipping or tipping by means of wedges or wooden blocks.

### **3.2 Operation**

#### **Operating the device safely**

Unsafe operation of the device can result in significant material damage and severe personal injury.

- Never transport persons on the load handler.
- Always look in the direction of travel.
- If the load is obscuring your view, travel backwards or instruct an additional person to proceed in front of the device as a lookout.
- Never place feet or other body parts in the vicinity of moving rollers.
- Adapt your travel speed to local conditions.
- In corners, at and in passageways and at blind spots, reduce your speed and be aware of the device dimensions.
- Do not travel on slopes or inclines.
- Maintain a sufficient stopping distance from trucks travelling in front.
- Adapt the stopping distance to the condition of the ground.
- Restrict (sudden) braking to hazardous situations.
- Avoid quick changes in direction.
- Do not overtake at blind spots.
- Do not lean or reach out of the operating area.
- Lower the load as far as possible for transport.
- If the load threatens to become unstable, stop and lower the load.

## Requirements for travel paths and work areas

Failure to observe the specific environmental conditions can result in significant material damage and severe personal injury.

- Only travel on level surfaces that are designated as traffic routes.
- Maintain a sufficient safety clearance between the tiller and racks/walls.
- Do not travel on slopes or inclines unless expressly permitted in this document.
- Traffic route conditions have a significant influence on the stopping distance. Adjust the travel behaviour to the prevailing conditions.
- Visibility conditions have a significant influence on the travel path. Ensure that you have clear visibility.
- Keep unauthorised persons out of the work area.
- Always set down and store the load at the designated locations.
- Never deposit the load and device on traffic, escape or rescue routes or in front of passageways, roller shutter gates and doors.
- Before working under a raised load, secure the load handler against lowering using a sufficiently strong chain.

## Preventing injuries to third parties

A heightened accident risk exists for unauthorised persons in the hazardous area.

- Instruct unauthorised persons to leave the hazardous area.
- In the case of a potential risk to persons, issue a warning signal in a timely manner.
- If endangered persons fail to leave the hazardous area, stop the device immediately.



The hazardous area is classed as the area in which persons are exposed to a direct risk by the movements of the device or are endangered indirectly, e.g. due to a falling load.

## Travelling onto lifts and loading bridges

A heightened risk of material damage and personal injury exists in lifts and on loading bridges.

- Before travelling onto lifts and loading bridges, ensure that they offer sufficient capacity for the individual weight of the device including the load and operator.
- Before travelling onto lifts and loading bridges, ensure that they are suitable and approved for such use by the owner.
- Travel load-first onto lifts and loading bridges and maintain a sufficient distance from the side walls.
- Park the device securely before any persons step into the lift or onto the loading bridge.

## **Moving loads safely**

An inadequately secured load poses a heightened risk of material damage and personal injury.

- Ensure that the load is in correct condition.
- Do not move loads unless they have been safely and securely applied.
- If there is a risk of parts of the load tipping or falling, take suitable safety measures (e.g. load backrest).

## **Transporting liquids safely**

When transporting liquids, the centre of gravity can vary according to the position of the device, which will significantly impact upon overall stability (e.g. in tanks).

- Avoid sudden/jerky braking or acceleration.
- Reduce the speed before and in corners.

## **3.3 Maintenance**

### **Conducting maintenance work safely**

Thorough and expert servicing is one of the most important prerequisites for safe operation of the device. Failure to perform regular maintenance can result in a malfunction of the device and poses a potential hazard to personnel and equipment.

- Perform maintenance and repair work in line with the specified maintenance intervals – see page 31.
- Maintenance and repair work must only be completed by specialist personnel with the requisite training.
- In the case of uncertainty, contact the manufacturer's customer service department.
- Use only original spare parts from the manufacturer.
- When repairing or replacing components, observe the device-specific settings.
- When replacing rollers, ensure that the device remains level (e.g. always replace left and right at the same time).
- The maintenance intervals for the lifting chains, which can wear out quickly, apply to normal use. In case of increased demands, relubricate more frequently, using the chain spray as prescribed.
- Hydraulic hoses must be replaced every 6 years.
- Immediately after any maintenance work, complete all steps for returning the device to service – see page 9.
- Do not clean the device with flammable liquids.
- Before working on the hydraulic unit: Fully lower the load handler.
- Before working on the pump: Secure the return spring.

## **4 Conversions and modifications**

### **Modifying the design and function of the device**

Any conversions or changes to the design of the device which have not been approved by the manufacture can result in severe personal injury and significant material damage. All warranty and liability claims will be void.

If modifications are to be made, they require written permission from the manufacturer, an authorised representative or a legal successor. This includes, but is not limited to, the following actions:

- Changes affecting the capacity
- Changes affecting the stability
- Changes affecting the control function
- Changes affecting the visibility
- Addition of attachments.

Under no circumstances must the operating speed of the device be changed, not even with the manufacturer's approval.


## **5 Residual risks**

### **Using consumables**

Improper handling of consumables is hazardous to health, life and the environment.

- Use consumables in the correct manner and in accordance with the manufacturer's specifications.
- Work with consumables must only be performed by qualified specialist personnel.

## C Structure and function

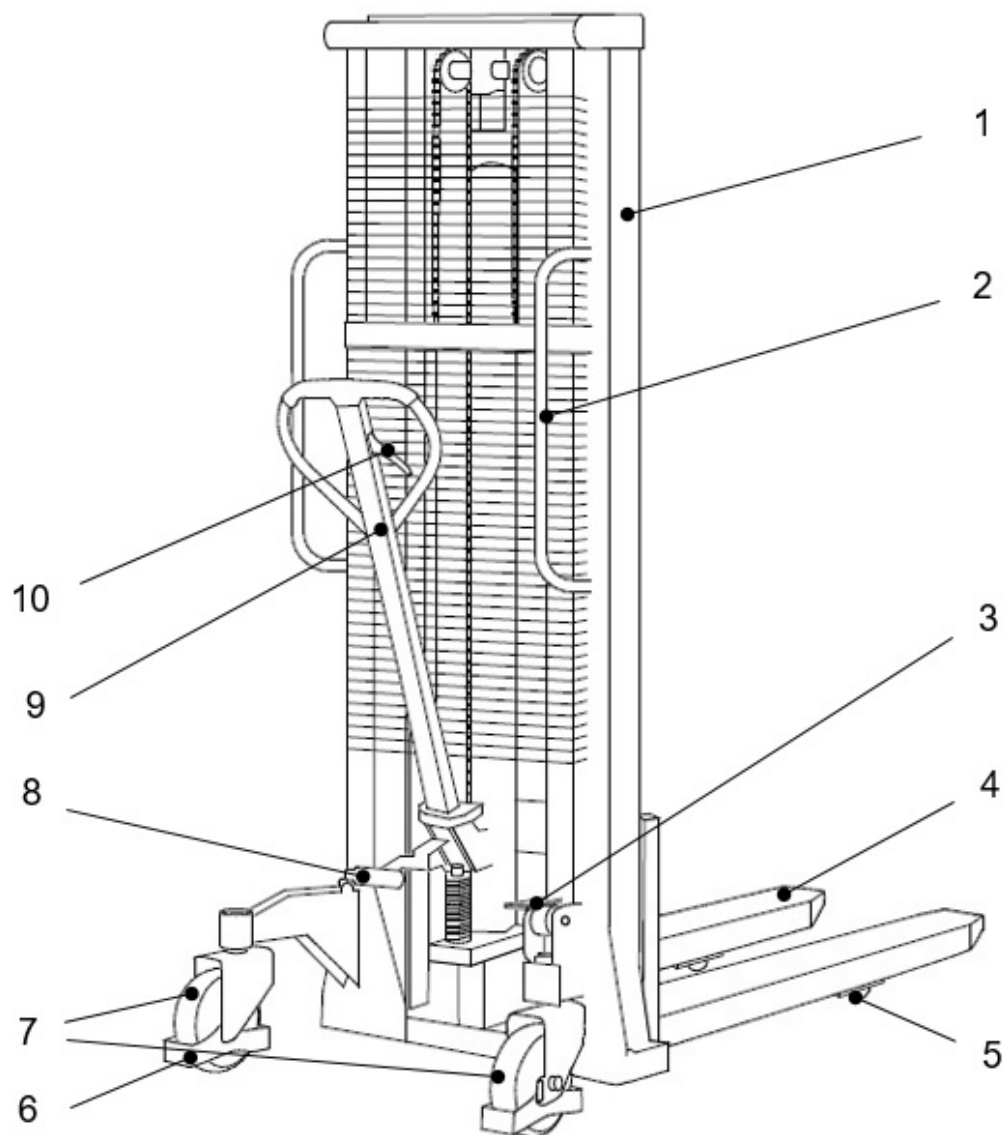


*Fig. 1: Assemblies and functional description*

| Item | Description                  | Function                                             |
|------|------------------------------|------------------------------------------------------|
| 1    | Mast                         | Raises and lowers the load handler.                  |
| 2    | Handle for moving the truck  | Moves the device.                                    |
| 3    | Foot-activated parking brake | Applies/releases the brake for the steering wheels.  |
| 4    | Load handler                 | Carries the load.                                    |
| 5    | Load rollers                 | Moves the device forward and back.                   |
| 6    | Impact protection            | Prevents the wheel running over the operator's foot. |

| Item | Description    | Function                                                                                                          |
|------|----------------|-------------------------------------------------------------------------------------------------------------------|
| 7    | Steering wheel | Controls the device.                                                                                              |
| 8    | Pump lever     | Raises and lowers the load handler.                                                                               |
| 9    | Tiller         | <ul style="list-style-type: none"> <li>– Controls the device.</li> <li>– Generates hydraulic pressure.</li> </ul> |
| 10   | Control handle | Raises and lowers the load handler.                                                                               |


## 1 Controls

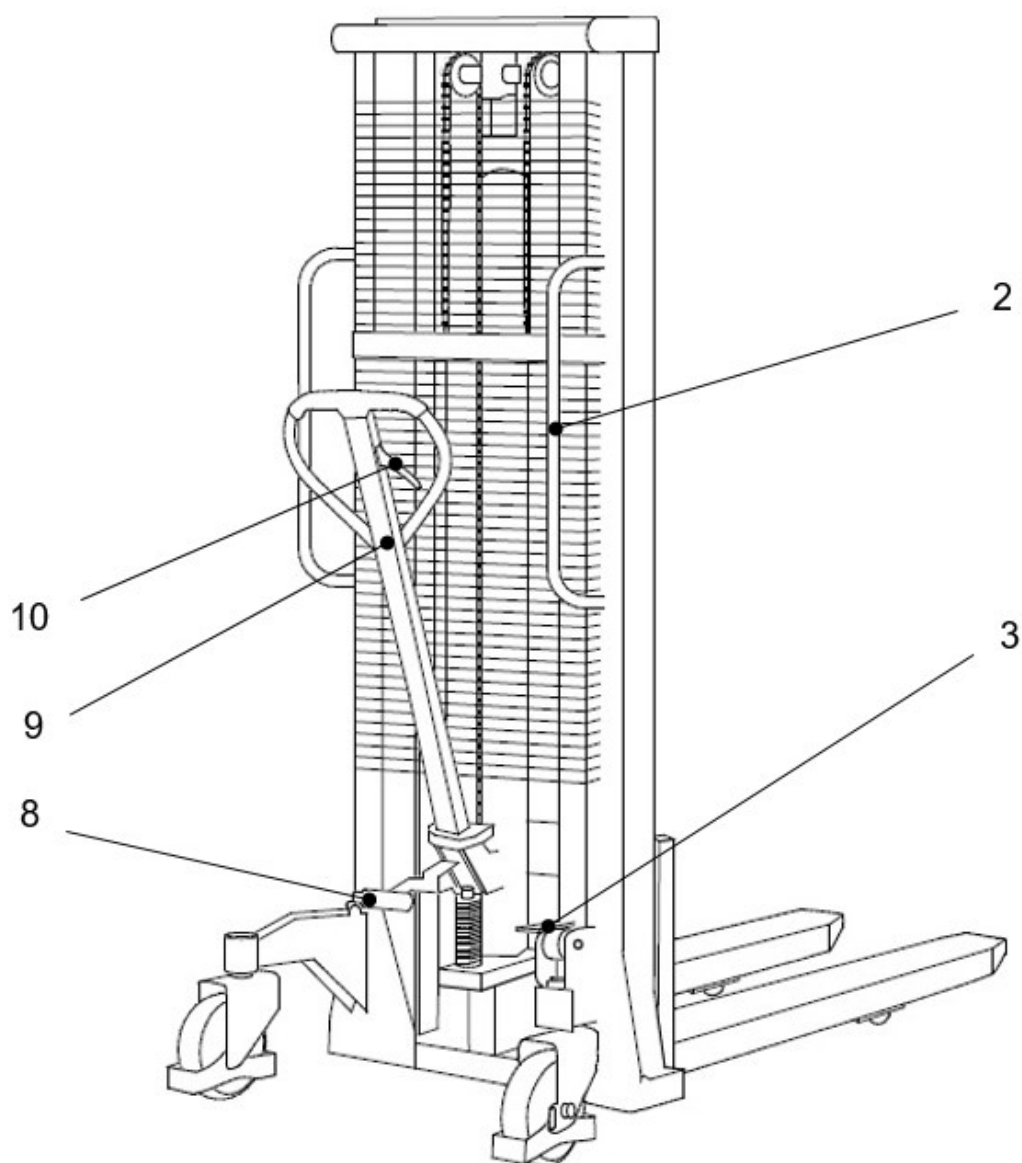

*Fig. 2: Control elements*

| Item | Description                  | Function                                                                                                       |
|------|------------------------------|----------------------------------------------------------------------------------------------------------------|
| 2    | Handle for moving the truck  | Moves the device.                                                                                              |
| 3    | Foot-activated parking brake | Applies/releases the brake for the steering wheels.                                                            |
| 8    | Pump lever                   | Raises and lowers the load handler.                                                                            |
| 9    | Tiller                       | <ul style="list-style-type: none"><li>– Controls the device.</li><li>– Generates hydraulic pressure.</li></ul> |
| 10   | Control handle               | Raises and lowers the load handler.                                                                            |

The control lever with the control handle is located on the tiller.

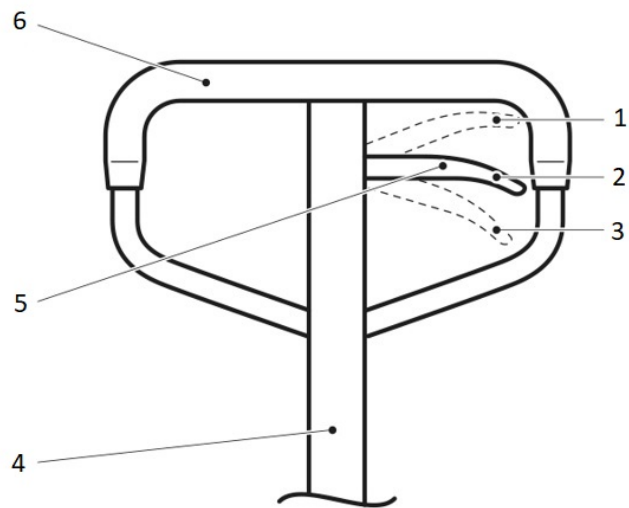


*Fig. 3: Control lever*

| Item | Description                          | Function                                         |
|------|--------------------------------------|--------------------------------------------------|
| 1    | Control handle in "lower" position   | Lowers the load.                                 |
| 2    | Control handle in "neutral" position | Moves the tiller freely.                         |
| 3    | Control handle in "lift" position    | Raises the load with the movement of the tiller. |
| 4    | Tiller                               | Controls the device.                             |
| 5    | Control handle                       | Controls the load handler.                       |
| 6    | Handle                               | Used to pull and push the unit.                  |

## 2 Marking and labelling

### 2.1 Warning and information signs

#### Locations of the warning and information signs

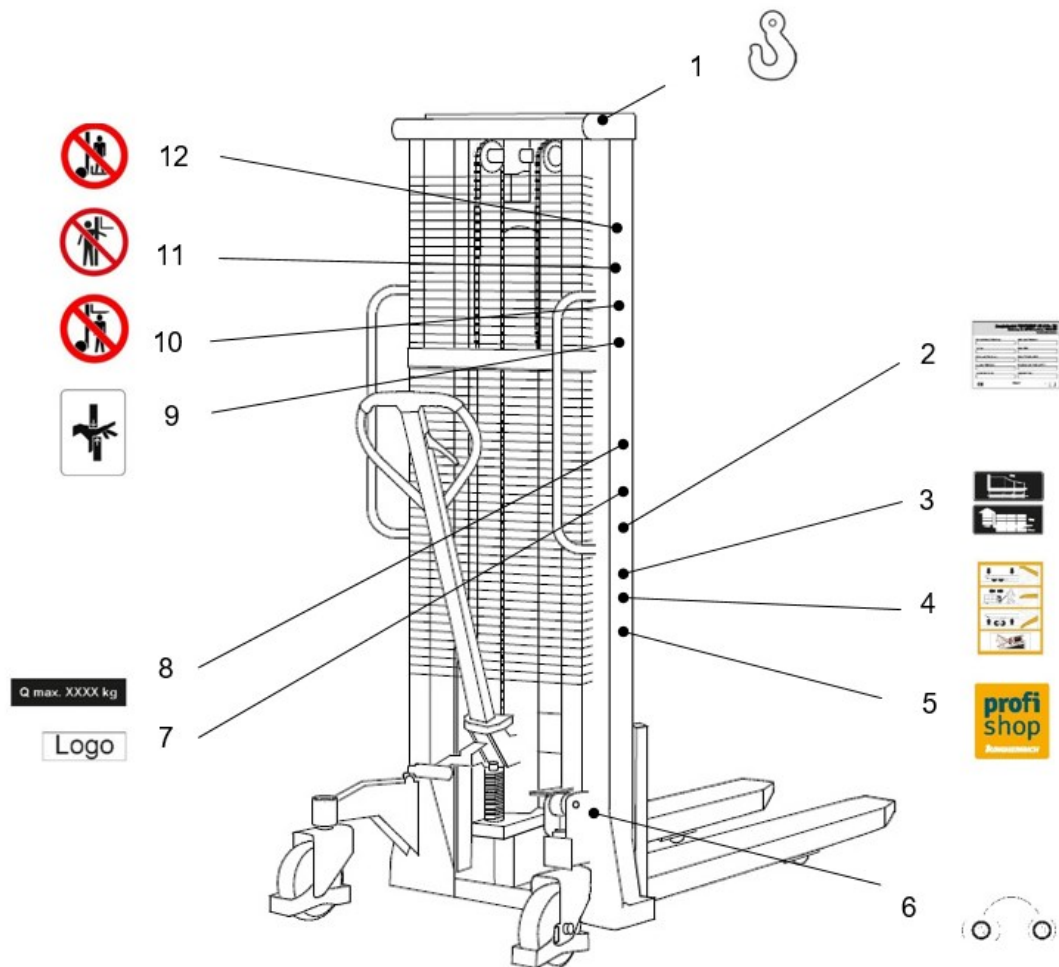

| Item | Description                                            |
|------|--------------------------------------------------------|
| 1    | Attachment point for crane lifting                     |
| 2    | Data plate                                             |
| 3    | Load chart                                             |
| 4    | Information sign: correct operation                    |
| 5    | Jungheinrich PROFISHOP                                 |
| 6    | Brake function notice                                  |
| 7    | Logo                                                   |
| 8    | Capacity $Q_{\max}$ XXXX kg                            |
| 9    | Information sign: "Risk of trapping"                   |
| 10   | Prohibition sign: "Do not stand on the load handler"   |
| 11   | Prohibition sign: "Do not reach through the mast"      |
| 12   | Prohibition sign: "Do not step under the load handler" |

## 2.2 Data plate

**Jungheinrich PROFISHOP AG & Co. KG**  
 Haferweg 24, 22769 Hamburg, GERMANY  
 Hersteller / Manufacturer

11 Produktbezeichnung / Product Type

10 Typ / Type

9 Seriennummer / Serial Number

8 Hubbereich / Lifting Range

7 Tragkraft / Load Capacity

2 Artikelnummer / Item Number

3 Option / Option

4 Baujahr / Year of Manufacture

5 Gesamtlänge/-breite / Total Length/Width

6 Leergewicht / Weight

CE UKCA Made in

Fig. 4: Data plate (schematic)


| Item | Information                      |
|------|----------------------------------|
| 1    | Name and address of manufacturer |
| 2    | Article number                   |
| 3    | Option                           |
| 4    | Year of manufacture              |
| 5    | Total length/width               |
| 6    | Net weight                       |
| 7    | Capacity                         |
| 8    | Lift range                       |
| 9    | Serial number                    |
| 10   | Type                             |
| 11   | Product designation              |



For truck-related queries or when ordering spare parts, always quote the truck serial number.

## 2.3 Lastdiagramm/Tragfähigkeit

Depending on the mast fitted, the truck will feature the following plates (1, 2). The plates specify the capacity (Q in kg) in stacking mode in the form of a diagram (1) or table (2).

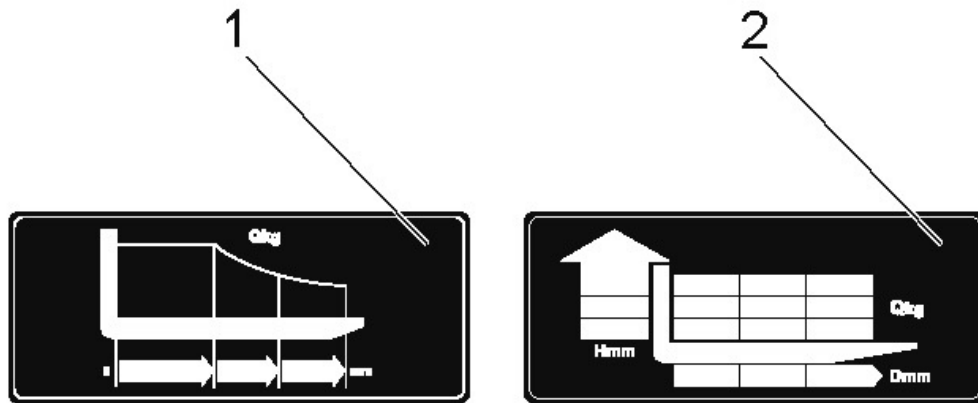

| Item | Information                                                                                     |
|------|-------------------------------------------------------------------------------------------------|
| 1    | Capacity (Q in kg) with different load centres (mm)                                             |
| 2    | Capacity (Q in kg) based on the load centre distance (D in mm) and the lifting height (H in mm) |

# D Technical Specifications

## 1 Dimensions

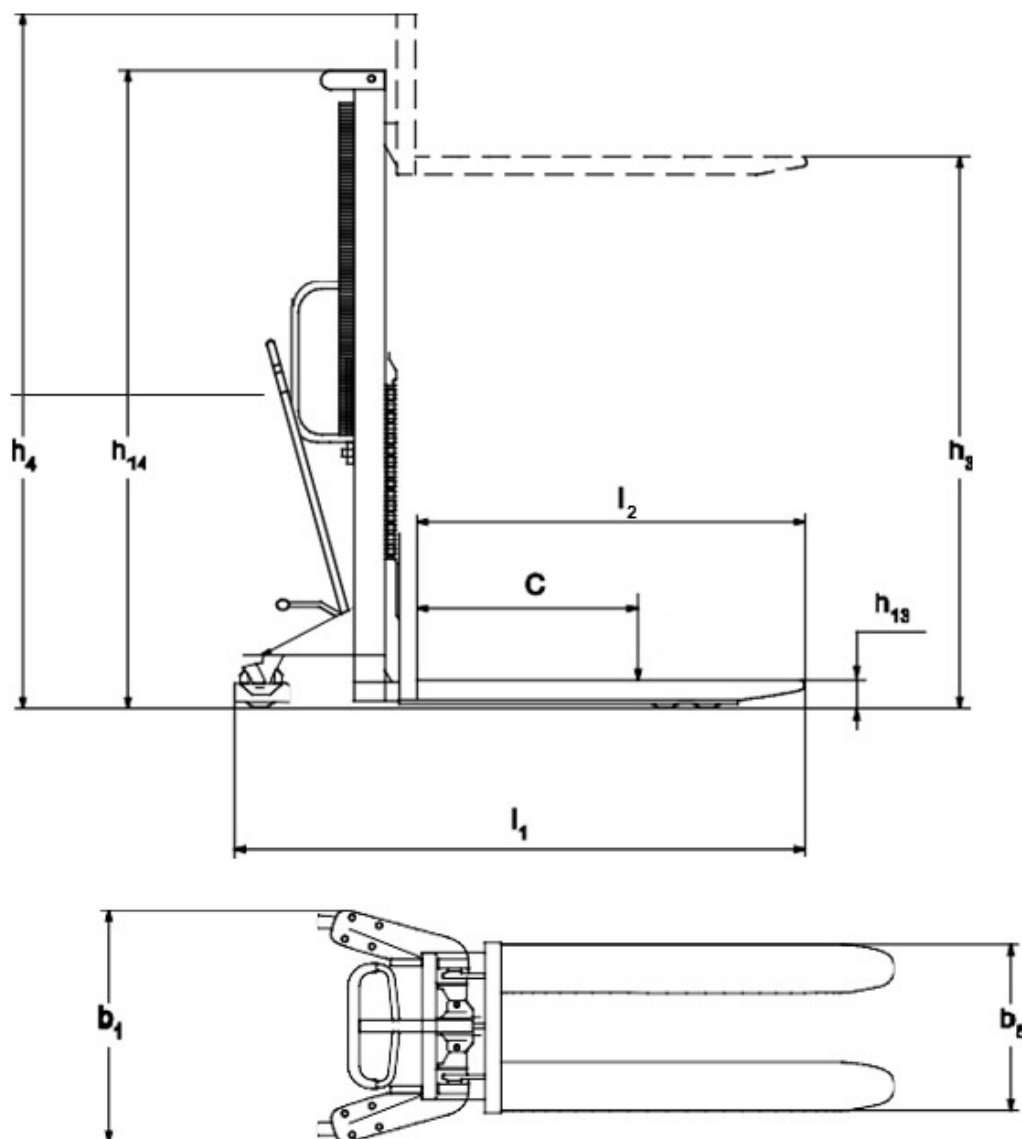


Fig. 5: Device dimensions (schematic)

## 2 Performance data

| Description                                | Item     | Value   |      |      | Unit |
|--------------------------------------------|----------|---------|------|------|------|
| Identification                             |          |         |      |      |      |
| Manufacturer's type designation            | —        | PSM 1.0 |      |      | —    |
| Capacity (Q)                               | —        | 1000    | 1000 | 1000 | kg   |
| Basic dimensions                           |          |         |      |      |      |
| Truck length                               | $l_1$    | 1570    | 1570 | 1570 | mm   |
| Fork length incl. fork shank               | $l_2$    | 1326    | 1326 | 1326 | mm   |
| Load centre distance                       | c        | 500     | 500  | 500  | mm   |
| Lift (standard mast)                       | $h_3$    | 1600    | 2000 | 2500 | mm   |
| Overall height<br>Load handler<br>extended | $h_4$    | 2030    | 2370 | 2870 | mm   |
| Lowered height                             | $h_{13}$ | 85      | 85   | 85   | mm   |
| Overall height                             | $h_{14}$ | 2030    | 1570 | 1855 | mm   |
| Truck width                                | $b_1$    | 740     | 740  | 740  | mm   |
| Overall width                              | $b_5$    | 550     | 550  | 550  | mm   |
| Load wheel diameter                        | —        | 80      | 80   | 80   | mm   |
| Steer wheel diameter                       | —        | 180     | 180  | 180  | mm   |
| Weight                                     | —        | 224     | 290  | 310  | kg   |

### Correct environmental conditions

| Condition                     | Value              |
|-------------------------------|--------------------|
| Application area              | Indoor application |
| Permitted ambient temperature | +5°C to +40°C      |
| Minimum illumination          | 50 Lx              |

# E Commissioning and transport

## 1 Using the Truck for the First Time

### *Preparing for commissioning*

- Verify that the warning and information signs are present and undamaged. Replace any damaged or missing signs.
- Check all supplied components for transport damage.
- Check the functionality of the actuators, rollers, wheel axles and scissor lift axles.
- Immediately notify the carrier of any transport damage or missing components.

## 2 Transport

### 2.1 Attaching the device


#### **⚠ WARNING!**

#### **Inadequately secured load!**

Risk of material damage and personal injury due to falling loads.

- ▶ Always use cranes and lifting gear with sufficient capacity.
- ▶ Attach lifting gear only to the designated attachment points.
- ▶ Ensure that there are no persons in the area under the suspended load.
- ▶ Instruct all persons to leave the hazardous area during crane loading.

#### ***Attaching the device***

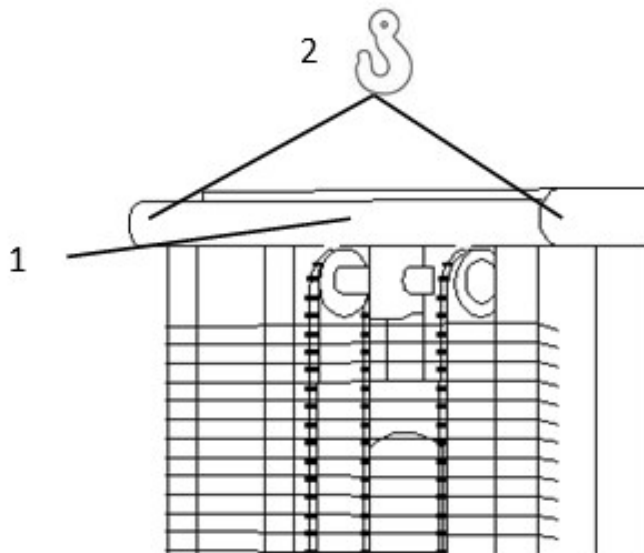

#### ***Requirements***

- The truck is parked securely – see page 28.
- Attach the lifting gear to the attachment points (1) on the cross member of the mast (2).

*The device is attached.*

## 2.2 Securing the device

### **⚠ CAUTION!**


#### **Inadequately secured transport!**

Risk of material damage and personal injury due to unsecured loads.

- ▶ The device must be sufficiently secured when transported on an HGV or trailer.
- ▶ Use the lashing rings on the HGV or trailer.
- ▶ The device must only be loaded by specially trained personnel while observing the applicable regulations.

---

#### **Securing the device**

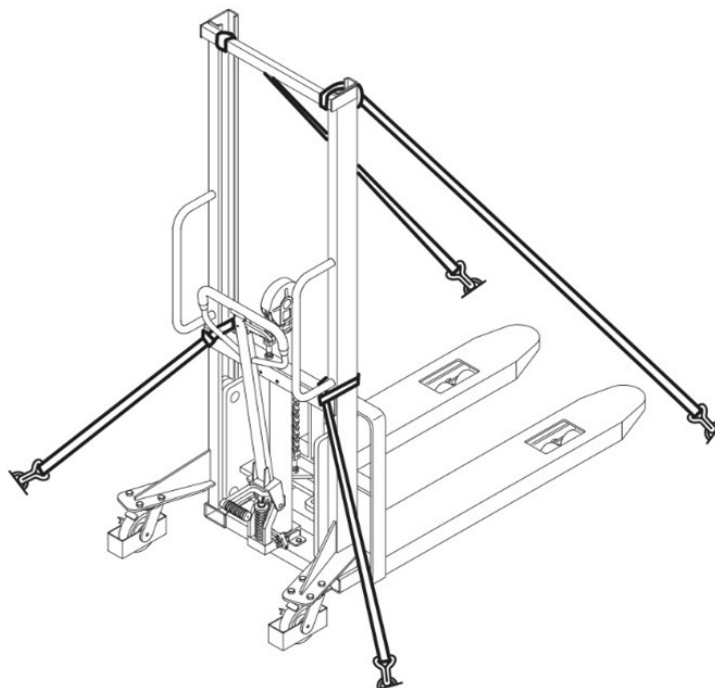

- Attach the tensioning belts to the attachment points on the truck and to the lashing rings.
- Tighten the tensioning belts with the tensioners.  
*The device is secured and ready for transport.*

# F Operation

## CAUTION!

### **Collisions with persons in the vicinity!**

Risk of personal injury.

- ▶ Before moving the device, raising or lowering the load, instruct persons to leave the hazardous area.
  - ▶ In the case of a potential risk to persons, issue a warning signal in a timely manner.
  - ▶ If endangered persons fail to leave the hazardous area, stop the device immediately.
- 

## **1 Checking the device before daily use**

Regular inspection allows faults or malfunctions to be recognised at an early stage and rectified promptly. This increases the service life of the product and helps to ensure safe operation.

### ***Checking the device for damage and defects before start-up at the beginning of a shift***

- Remove any loads from the device and move the load handler to its lowest position.
- Visually inspect all assemblies for deformation or cracks.
- Check the lift mechanism for correct function and ease of movement. Look out for any unusual noises and blockages.
- Check the load handler and carriage for wear and damage.
- Check the hydraulic system for leaks.
- Check the rollers for correct function and ease of movement.
- Check the hydraulic oil level and top up if necessary.
- Check the vertical elongation of the lift mechanism.
- Verify that all screws and nuts are securely fastened.
- Verify that all signs and warnings are present and legible.
- Immediately notify the relevant supervisor(s) of any damage or defects on the device or attachments.
- Take any devices with damaged or defective safety-relevant components out of service and repair them before next use.

## 2 Raising the load

### **WARNING!**

#### **Falls from great heights!**

Risk of fractures and head injuries due to falling.

► Never lift or carry persons with the load handler.

---

### **WARNING!**

#### **Inadequately secured load!**

Risk of material damage and personal injury due to falling loads.

► Only lift adequately secured loads.

► Position the load's centre of gravity centrally on the device.

► If there is a risk of parts of the load tipping or falling, take suitable safety measures (e.g. load backrest).

---

### **NOTICE**

#### **Exceeding the permitted load capacity!**

Risk of damage to the device due to excessive loads.

► Note the permissible maximum capacity.

---

#### ***Raising the load***

##### ***Requirements***

- The load is correctly palletised and secured against tipping.
- Load handler fully lowered.
- Slowly move the load handler under the load until the load is resting against the fork shank.
- Move the control handle to the "lift" position.
- Move the tiller up and down with a "pumping" action or operate the pump lever until the load has reached the desired height. Ensure that the load is positioned evenly on the load handler.
- Move the control handle to "neutral" position.

*The load has been raised.*

### 3 Moving the load

#### **WARNING!**

##### **Unevenly distributed loads!**

Risk of personal injury and material damage due to sudden tipping of the load.

- ▶ Ensure that the load is in correct condition.
- ▶ Only move loads if they have been safely and securely applied.
- ▶ Take suitable precautions if there is a risk of the load tipping or falling down (e.g. load backrest).

#### **CAUTION!**

##### **Unintentional lowering of the load!**

Risk of personal injury due to crushing.

- ▶ Before tilting the tiller, ensure that the control handle is in "neutral" or "lift" position.
- ▶ Do not place any part of your body between the load handler and the ground.

#### **CAUTION!**

##### **Unsafe operating condition!**

Risk of personal injury and material damage due to faults or unexpected breakdowns.

- ▶ In the case of faults or unexpected breakdowns, cease operation immediately.
- ▶ Switch off the device and secure it against reactivation.
- ▶ Inform the relevant supervisor(s) or the manufacturer's service department.

#### **CAUTION!**

##### **Protruding tiller!**

Risk of personal injury and material damage due to the tiller protruding in tight corners.

- ▶ Be aware of your surroundings in tight corners.
- ▶ Keep a safe distance from people and objects.



The tiller is connected to the swivel castors and transmits the steering and travel movements performed by the operator.

##### ***Moving the load***

###### ***Requirements***

- The load is raised sufficiently high.
- Move the control handle to "neutral" position.
- Push or pull the handle or tiller to move the device forward or back.
- Move the tiller to the side to move left or right.

*The device moves in the desired direction.*

## 4 Lowering the load

### CAUTION!

#### **Lowering heavy loads!**

Risk of personal injury due to crushing.

- ▶ Always lower the load slowly and carefully.
- ▶ Do not place any part of your body between the raised load and the ground.
- ▶ Wear safety shoes.

### NOTICE

#### **Increased impact load!**

Risk of device damage and malfunction due to excessively fast lowering of the load.

- ▶ Always lower the load slowly and carefully.



If the device is to be moved after depositing the load, ensure that there is sufficient room for manoeuvring.

#### ***Lowering the load***

- Move the control handle to the "lower" position.
- To stop the lowering process: Release the control handle.
- Before continued operation: Move the control handle to "neutral" position.

*The load has been lowered.*

## 5 Braking the device

#### ***Braking the device slowly***

- Move the tiller in the opposite direction to the travel direction until the device comes to a stop.

*The device has been stopped.*

#### ***Braking the device quickly (emergency stop)***

- Move the control handle to the "lower" position.
- Lower the load.

*The lowered load brakes the device.*

## 6 Applying the parking brake

### ***Applying the parking brake***

- To apply the brake, press the brake all the way down with your foot.

*The brake shoe is pressed against the wheels and blocks them.*

### ***Releasing the parking brake***

- To release the brake, push the brake all the way up with your foot.

*The spring pushes the brake shoe back and releases the wheels.*

## 7 Parking the device

### ***Parking the device securely***

- Position the device on a smooth, level surface.
- Fully lower the load handler.
- If possible, apply the parking brake.
- Fold up the tiller so that it doesn't hinder other operations.

*The device is parked securely.*

# G Maintenance and repair

## 1 Faults and troubleshooting

- In the case of a device fault, carry out the following troubleshooting measures.
- If you encounter problems when carrying out the measures or if they fail to rectify the problem, contact the manufacturer's customer service department.

### **CAUTION!**

#### **Incorrect maintenance!**

Risk of material damage and personal injury due to failure of important components.

- ▶ Use only original spare parts from the manufacturer.
  - ▶ Maintenance and repair work must only be completed by specialist personnel with the requisite training.
  - ▶ When replacing rollers, ensure that the device remains level (e.g. always replace left and right at the same time).
  - ▶ Always observe the device-specific settings when carrying out repairs or replacing components.
-

## Fault table

| <b>Fault</b>                                                                  | <b>Possible cause</b>                                                              | <b>Fault rectification</b>                                       |
|-------------------------------------------------------------------------------|------------------------------------------------------------------------------------|------------------------------------------------------------------|
| Control lever is in "lift" position, load handler not lifting.                | Air in the hydraulic system.                                                       | Bleed the hydraulic system.                                      |
|                                                                               | Hydraulic pump faulty.                                                             | Check the hydraulic pump and replace if necessary.               |
| Load handler not lifting even though the hydraulic pump is working correctly. | Load is too heavy (overload valve actuated).                                       | Reduce the load.                                                 |
|                                                                               | Control lever is not set correctly.                                                | Set the control lever or piston rod.                             |
|                                                                               | Lowering valve no longer closes or valve body is leaking due to oil contamination. | Clean the lowering valve or piston rod and replace if necessary. |
|                                                                               | Oil level in hydraulic reservoir too low.                                          | Lower the load handler and top up the hydraulic oil.             |
|                                                                               | Viscosity of hydraulic oil is too high.                                            | Use suitable hydraulic oil.                                      |
|                                                                               | Lowering valve is not coordinated with control lever.                              | Adjust the piston rod nut.                                       |
| Load handler does not reach the top position.                                 | Oil level in hydraulic reservoir too low.                                          | Lower the load handler and top up the hydraulic oil.             |
| Raised load is lowered only slowly or not at all.                             | Ambient temperature too low, hydraulic oil too viscous.                            | Move to area with higher ambient temperature.                    |
|                                                                               | Hydraulic cylinder is damaged or deformed.                                         | Repair components or have them replaced.                         |
| Raised load handler lowers automatically.                                     | Hydraulic unit is leaking.                                                         | Check the hydraulic unit and replace if necessary.               |
|                                                                               | Lowering valve no longer closes or valve body is leaking due to oil contamination. | Adjust, clean or replace the valve.                              |

## 2 Maintenance

### **⚠ CAUTION!**

#### **Uncontrolled movement of the device!**

Risk of personal injury and material damage due to sudden movements of the device.

- ▶ Park the device securely when not in use and before maintenance work.
- ▶ If possible, switch off the device.
- ▶ If possible, use the parking brake.

### **⚠ CAUTION!**

#### **Safety equipment rendered ineffective!**

Risk of personal injury and material damage due to ineffective safety equipment.

- ▶ Under no circumstances must safety equipment (e.g. emergency disconnect switch) be rendered ineffective.
- ▶ Repairs must only be carried out by qualified specialists.

## 2.1 Maintenance intervals

### *Requirements*


- The device is used in single-shift operation.
- The device is used under normal operating conditions – see page 7.
- Maintain the device at the specified intervals.
- If the device is operated in very dusty conditions, subjected to extreme temperature fluctuations or used in multi-shift operation, the intervals must be reduced accordingly.

| Maintenance interval                 | Maintenance                                                                                                                                                                                                                                |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Daily.                               | <ul style="list-style-type: none"><li>– Check the device before use – see page 24.</li><li>– Check the wheels for wear and damage.</li><li>– Check the wear of the lifting chains and relubricate with chain spray if necessary.</li></ul> |
| After all cleaning and repair work.  | <ul style="list-style-type: none"><li>– Lubricate the truck at the designated points – see page 33.</li><li>– Check and bleed the hydraulic system and/or top up oil.</li></ul>                                                            |
| After the first 20 operating hours.  | <ul style="list-style-type: none"><li>– Replace hydraulic oil.</li></ul>                                                                                                                                                                   |
| After the first 100 operating hours. | <ul style="list-style-type: none"><li>– Re-tighten wheel nuts and bolts.</li></ul>                                                                                                                                                         |
| Monthly.                             | <ul style="list-style-type: none"><li>– Lubricate all joints and contact surfaces with long-life lubricant.</li><li>– Check the wheel mountings and bearings.</li></ul>                                                                    |

| Maintenance interval                              | Maintenance                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Every 3 months.                                   | <ul style="list-style-type: none"> <li>– Check screw connections.</li> <li>– Check the mechanical parts of the tiller and grease if necessary.</li> <li>– Check the hydraulic system for leaks, damage and secure attachment.</li> <li>– Check the hydraulic oil level.</li> <li>– Check the load handler and lift mechanism carriage for wear and damage.</li> </ul>      |
| Every 2000 operating hours, or at least annually. | <ul style="list-style-type: none"> <li>– Check all parts of the device for wear and replace faulty parts.</li> <li>– Check labels are present and complete.</li> <li>– Arrange for an expert inspection to be carried out.</li> <li>– Check the hydraulic oil and replace if necessary (more frequently if the oil is very dark, contaminated or flocculating).</li> </ul> |
| Annually or after unusual events.                 | <ul style="list-style-type: none"> <li>– Have safety checks performed at regular intervals and following any unusual events – see page 34.</li> </ul>                                                                                                                                                                                                                      |
| After 6 years of use.                             | <ul style="list-style-type: none"> <li>– Replace the hydraulic hoses.</li> </ul>                                                                                                                                                                                                                                                                                           |

## 2.2 Consumables

### Lubricants

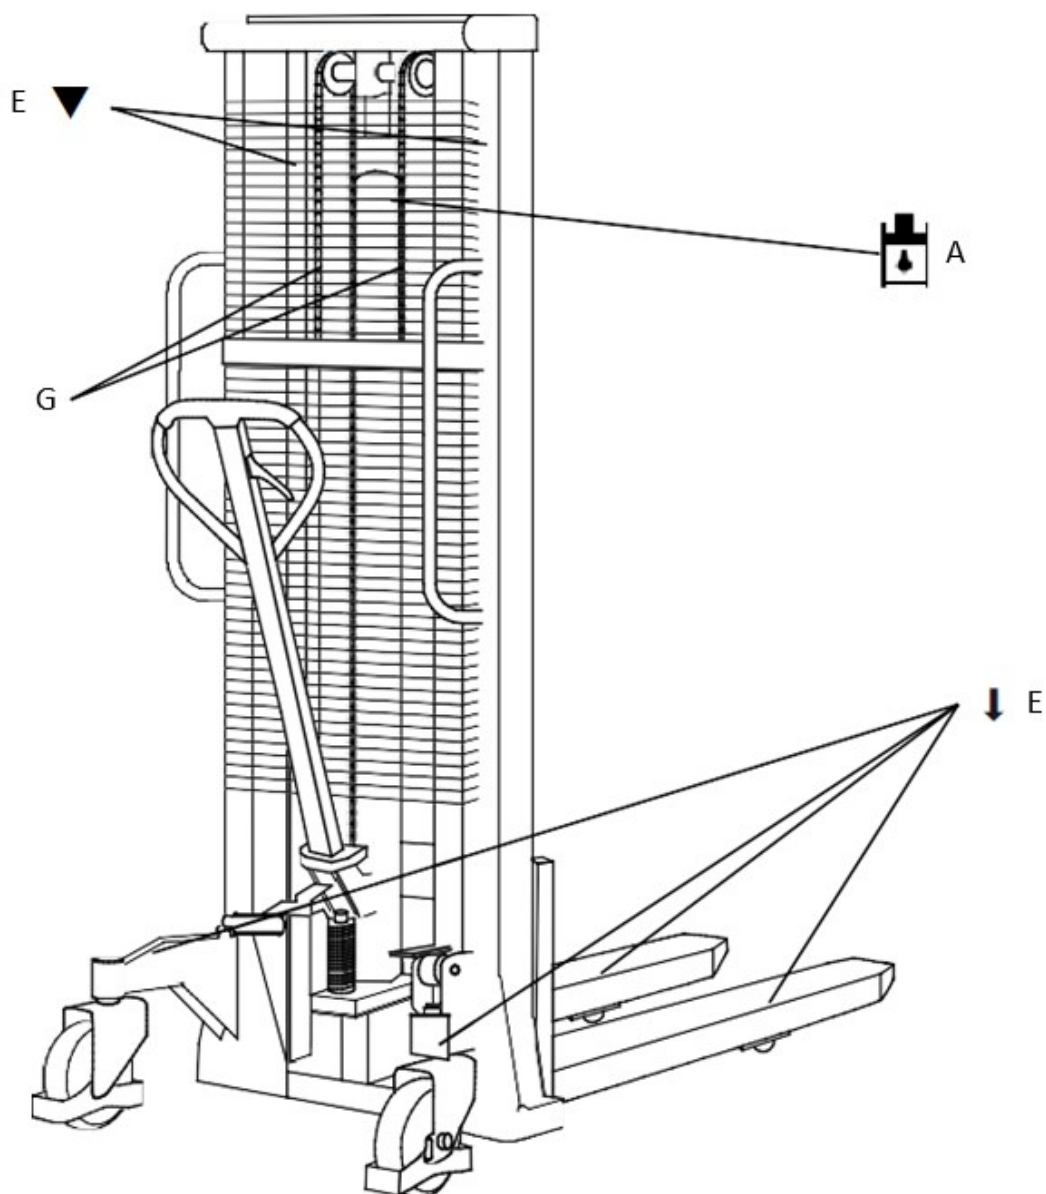

|                                                                                     |                           |
|-------------------------------------------------------------------------------------|---------------------------|
| ▼                                                                                   | Contact surfaces          |
| ↓                                                                                   | Grease nipple             |
|  | Hydraulic oil filler plug |

| Position | Lubricants              |                 | Value                 | Unit         |
|----------|-------------------------|-----------------|-----------------------|--------------|
| A        | Hydraulic oil           | Oil type        | ISO VG 32             | –            |
|          |                         | Viscosity       | 30                    | cSt at 40 °C |
|          |                         | Refill quantity | 0.4                   | Litres       |
| E        | Multi-purpose lubricant |                 | DIN 51825<br>T1-K 2 K | –            |
| G        | Chain spray             |                 | –                     | –            |

### 3 Repairs

#### 3.1 Safety tests to be performed at intervals and after unusual events

➔ Always perform safety checks in accordance with national regulations. These may deviate from the steps listed below.

##### *Requirements*

- The inspecting person is qualified to conduct the following check.
  - The inspecting person is independent and unbiased (from an operational and business perspective) and assesses the device purely in terms of its safety.
  - The inspecting person possesses sufficient knowledge and experience to assess the condition of the device and the effectiveness of the safety equipment based on the rules of technology and the principles for testing the described device.
- Inspect the technical condition of the device with regard to accident safety.
  - Thoroughly check the device for damage.
  - Produce a written test report and retain it for at least 2 years. Responsibility for the test report rests with the owner.
  - Rectify any identified defects before next using the device.
  - Following a successful inspection, attach an inspection plaque to the device in a visible location.

# H Shutdown, storage and disposal

## 1 Decommissioning

### 1.1 Shutting down the device

- Thoroughly clean the device.
- Check the hydraulic oil level and top up if necessary.
- Apply a thin layer of oil or grease to any non-painted mechanical components.
- Lubricate the device.

### 1.2 Returning the device to service after shutdown

- Thoroughly clean the device.
- Lubricate the device.
- Check the hydraulic oil for condensation water and replace the oil if necessary.
- Start up the device.
- Perform a complete function check immediately after start-up.

## 2 Storage

### 2.1 Storing the device

#### **NOTICE**

#### **Incorrect storage!**

Risk of material damage.

- ▶ Always store the device in a dry and frost-free environment.
- ▶ Jack up the device so that the rollers can spin freely.

---

#### ***Storing the device***

##### *Requirements*

- Device is being taken out of service for more than 2 months (e.g. for operational reasons).
- Device has been prepared for storage as described, see page 35.
- Protect the device against dust and corrosion, e.g. using a tarpaulin.
- Before storing the device for longer than 6 months, discuss necessary additional measures with the manufacturer's customer service department.

## **3 Disposal**

### **3.1 Decommissioning the device**

- Observe the applicable regulations in the country of use when decommissioning the device.

### **3.2 Disposing of the device**

- Observe the country-specific regulations regarding disposal of the device and consumables.