

Supplement to Instruction Manual

Level control





1.0 Optimum Safety...



The operator must stand with a full view of the lifting and lowering movements of the equipment.

Clearances around the equipment must be checked before operating. No extraneous objects must be placed under the equipment.

MAKE SURE that neither forks nor load snag extraneous objects during lifting and lowering.

- See also the instruction manual for the lifting equipment.



A warning label with the below text must be attached to the equipment.

Black lettering on yellow background:



The labels must be placed on the equipment.



2.0 How operate the level control



Push "Power ON" and the green lamp is on.
The lifting equipment can start lifting/lowering.



NOTE! Manual operating of the handle is not possible when the level control is active.



Upwards or downwards positioning can be chosen on the arrows (up/down).

The red lamp is flashing, when the level control is active. The forks raise/lower after setting the time delay.

2.0 How to operate the level control



To set the time delay, use *"Power ON"*.

To switch on the level control in the programming mode, press "Power On" until the green lamp (A) (placed next to "Power ON") is flashing.

The green lamp flashes and then makes a break. The flashes between the breaks can be counted and state the time delay (number of seconds).

To set the time delay, press "Power ON". Each press increases the time delay by one second (one flash) up to 25 seconds. Then it starts from one second again (one flash).

When the requested time delay has been reached (number of flashes is reached), wait for one minute. The green lamps of the level control switch off automatically.

When switching on the level control (normally) next time, the new settings will be active.

2.0 How to operate the level control



Setting the range

1.
Power on: Green lamp is on.
2.
Place the item at the requested sensing distance.
The red spot must be visible on the item.
3.
Press the button B approx. 3 seconds. The green and yellow lamps (B) are flashing. Press B again for (short) confirmation.



The photocell can be turned 30° to the right or left.

NOTE! The photocell must point across the pallet.



The height of the photo cell can be adjusted on the thumbscrew.

S977

Pos_udstyr-EN
010615