

Operating instruction

for the BAUER shovels types BS, DGS and HVR

Operation

- 01. Check state of product before use.
- 02. Put the lifting mast in vertical position and adjust the forks to the width of the fork sleeves
- 03. Drive in the forks completely.
- 04. It can be secured by putting the securing chain around the mast and tighten it by hooking the carabiner into a chain link.
- 05. Mechanical shovels: unwind the tow line
- 06. Hydraulic shovels: connect the hydraulic hoses
- 07. Hydraulic shovels: put the shovel with the help of the hydraulic into the loading position
- 08. Drive into the bulk goods.
- 09. Hydraulic shovels: put the shovel with the help of the hydraulic into the loading position
- 10. Lift the shovel.
- 11. Mechanical shovels: unlock by pulling the tow line
- 12. Hydraulic shovel: tipping with the help of the hydraulic
- 13. During the tipping act, the driver must not leave the fork-lift truck.
- 14. Mechanical shovels: bolt by setting down the shovel
- 15. Hydraulic shovels: bring into original position with the help of the hydraulic
- 16. During the lifting of a product, no person must stay under the lifted product
- 17. Only to be used with fork-lift truck.

Manual

- 01. Observe carrying capacity of the fork-lift truck in connection with the product.
- 02. The owner and the operating company must assure that each user of the product becomes completely familiar with the use of the product.
- 03. Hydraulic design: observe max. pressure

Maintenance

- 01. Maintainance is to be made by trained and qualified staff.
- 02. The product is to be examined on damages before each use.

