



Operating Instructions

- Tilting container -



Original Operating Instructions

Tilting container

Type VD/VG



BAUER Südlohn GmbH
Eichendorffstr. 62
D-46354 Südlohn
Tel.: +49 2862 709 – 0
Fax: +49 2862 709 – 156
Email: info@bauer-suedlohn.de

www.bauer-suedlohn.de
www.geotainer.com

Operating Instructions

- Tilting container -



Copyright

The operating instructions are protected by copyright for BAUER Südlohn GmbH. They are intended for maintenance and operating personnel. The text, images and drawings of a technical nature they contain may not be

- duplicated,
- distributed,
- used without authorisation for other purposes or shared with others, either in full or in part.

Any further use requires the prior written permission of BAUER Südlohn GmbH. Sec. 106 of the German Copyright Act (UrhG – Gesetz über Urheberrecht und verwandte Schutzrechte) applies in cases of violation. All misuse is punishable.

Internal use is permitted for the operator of the machine in connection with the operation of the machine.

© Bauer GmbH 2018

History

| | | | |
|----------------|-------------|---|---|
| | | | |
| | | | |
| | | | |
| | | | |
| V 1.1 | 25/07/2018 | Customer version, editing incorporated | BKL |
| V 1.0 | 29/06/2018 | Customer version | BKL |
| V 0.0 | 28/06/2018 | First created | BKL, cesitec GmbH, Bochumer Str. 217, 45886 Gelsenkirchen, Tel.: 0209 15519 104 |
| Version | Date | Reason for/scope of the revision | Person responsible |

Operating Instructions

- Tilting container -



Table of contents

| | Page |
|---|-----------|
| 1 Basic information..... | 4 |
| 1.1 Information on the operating instructions..... | 4 |
| 1.2 Abbreviations, symbols and technical terms..... | 4 |
| 1.3 Conformity / standards and guidelines..... | 5 |
| 1.4 Warranty and liability..... | 5 |
| 2 Safety by the machine | 5 |
| 2.1 Definitions..... | 5 |
| 2.2 Warnings, symbols and markings..... | 6 |
| 2.3 Working safely with the machine | 7 |
| 3 Description of the container..... | 10 |
| 3.1 Intended use..... | 10 |
| 3.2 Improper use | 10 |
| 3.3 Structure, function and operating modes..... | 10 |
| 3.4 Operating materials and media supply | 12 |
| 3.5 Technical data | 12 |
| 3.6 Machine marking | 13 |
| 4 Setup and commissioning..... | 13 |
| 5 Operation..... | 14 |
| 5.1 Safety notes | 14 |
| 5.2 Operation of tilting container | 15 |
| 5.3 Adjusting the tilting speed | 16 |
| 6 Troubleshooting and fault elimination..... | 17 |
| 6.1 Safety..... | 17 |
| 6.2 Characteristic faults and elimination of them by the operator | 17 |
| 7 Servicing | 17 |
| 7.1 Safety..... | 17 |
| 7.2 Maintenance..... | 17 |
| 7.3 Repair..... | 18 |
| 8 Decommissioning, disassembly and disposal | 18 |
| 9 Spare parts list..... | 18 |
| 10 Appendix | 19 |
| 10.1 Declaration of conformity | 19 |

Operating Instructions

- Tilting container -



1 Basic information

1.1 Information on the operating instructions

- It is necessary to read through the operating instructions carefully before starting any work and store them in the immediate vicinity of the system, accessible to the authorised personnel at all times. The operator of the machine determines who is authorised as a user.
- The operating instructions provide information about:
 - description of the dangers and instructions for safe handling of the machine,
 - the intended use,
 - the structure and description of the components,
 - the functionality of the machine,
 - measures to establish operational readiness and operational safety,
 - the operation of the machine,
 - the maintenance and testing of the machine.
- They are a component of the machine and therefore must be supplied with the machine.
- For better explanation, illustrations may be shown not to scale and differ from the actual model.

1.2 Abbreviations, symbols and technical terms



Note/tip

The Note symbol is used to identify information on operation of the machine and provides useful tips and recommendations, as well as information for efficient, economical, fault-free operation.

The following abbreviations are used in these operating instructions:

| Abbreviation | Meaning |
|--------------|-------------------------------|
| BAUER | BAUER Südlohn GmbH |
| PPE | Personal protective equipment |
| Container | Tilting container |

The following design elements are used in these operating instructions:

| Symbol | Meaning |
|--------------------|---|
| (1) | numbered action steps |
| ⇒ | result after performing action steps |
| \$ | Enumeration |
| - | Enumeration, subgroup |
| <i>Italic text</i> | Identifies preconditions that must be met before an action description. |

Operating Instructions

- Tilting container -



Warnings are shown as follows in these operating instructions:

Each signal word is highlighted in a background colour (red, orange or yellow) according to the degree of risk of the hazardous situation.

Warning
symbol
opt. PPE
symbol(s)

SIGNAL WORD!

Nature, source and cause of a danger

Consequences of non-compliance

➤ Measures to prevent the danger; prohibitions

1.3 Conformity / standards and guidelines

The present machine has been designed and built according to the state of the art and the recognised rules of safety technology. Conformity of the machine with the EU guidelines and standards is confirmed through the CE declaration.

1.4 Warranty and liability



Note

Conformity in accordance with the Machinery Directive 2006/42/EC and the CE marking in accordance with the Machinery Directive 2006/42/EC become invalid if unauthorised alterations of the components or their assemblies are made.

The manufacturer assumes no liability for damage due to failure to follow these operating instructions.

2 Safety by the machine



Note

The present machine has been designed and built according to the state of the art and the recognised rules of safety technology. Nonetheless, dangers to the life and limb of the user or third parties or negative effects on the machine or other property can occur during use.

2.1 Definitions

2.1.1 Warning

A warning is used to warn of a situation that can lead to injury or death.

2.1.2 Personal protective equipment (PPE)

If personal protective equipment (PPE) is required to be worn, this is indicated through additional symbols in the warnings of these operating instructions and the product safety labels/safety signs on the machine.

Operating Instructions

- Tilting container -



2.2 Warnings, symbols and markings

2.2.1 Understand warnings



DANGER!

... refers to a dangerous situation with a high degree of risk that will lead to death or serious injury if not prevented.



WARNING!

... refers to a dangerous situation with a medium degree of risk that could lead to death or serious injury if not prevented.



CAUTION!

... refers to a dangerous situation with a low degree of risk that could lead to slight or moderate injury if not prevented.



ATTENTION

... refers to a possibly dangerous situation that can lead to property damage if not prevented.

2.2.2 Understand warning symbols

The following symbols can be used in the operating instructions according to the type of danger:



General warning of danger!



Warning: suspended load!



Warning: crushing hazard!



Warning: hand injury!

Operating Instructions

- Tilting container -



Warning: obstacles on the floor!

2.2.3 Personal protective equipment symbols

The following symbols can be used in the operating instructions according to the area of use:



Wear helmet!



Wear hearing protection!



Use hand protection!



Wear safety shoes!

2.2.4 Other markings



Note attachment points!

2.3 Working safely with the machine

The following section “Basic warnings and safety notes” deals with all warnings and safety notes for all stages of the machine’s life cycle. Warnings that are associated directly with an activity are an exception to this.

2.3.1 Basic warnings and safety notes

Local accident prevention regulations must be applied to all work on the machine.

Persons involved with the machine must be older than 18 years of age and familiar with the functionality of the machine and the dangers arising from the machine.

Operating Instructions

- Tilting container -



DANGER!

Risk of fatal injury and various risks of injury

Besides the safety notes in these operating instructions, the safety notes in the operating instructions of the supplier must be observed!



DANGER!

Unauthorised alterations of the Tilting container can endanger safe operation! This will lead to risk of fatal injury or various risks of injury!

Making unauthorised alterations to the machine such as the following without permission of BAUER is prohibited:

- Design changes
- Modifications of the protective/safety equipment
- Changing operating materials



WARNING!

Tilting container stacked on top of each other can tip over!

Risk of fatal injury and crushing hazard due to containers tipping over.

- The containers must not be stacked.



WARNING!

Insufficient lighting or visibility.

Danger of various types of injury.

- The operator is responsible for sufficient lighting in the working and transport areas!
- Operation of the container with insufficient lighting or visibility (fog) is prohibited.



WARNING!

For additional purchased components, the manufacturer's indications must be observed!



CAUTION!

Risk of injury due to slipping, tripping and falling!

- Do not leave any materials or tools lying on walkways or driveways.
- Immediately absorb/remove oil and other materials that encourage slipping in walkway areas; use oil binding agents.

2.3.2 Recognise safety technology protective equipment

On the basis of the risk assessment of the machine, a safety chain is integrated in order to ensure safe work with the machine.

Operating Instructions

- Tilting container -



⚠ DANGER!

Unintentional falling/toppling of the Tilting container!

Various risks of injury due to material tipping out/toppling container.

- Always connect the fastening chain to the carrier before lifting the container.
- Remove the locking ring just before the tipping process.

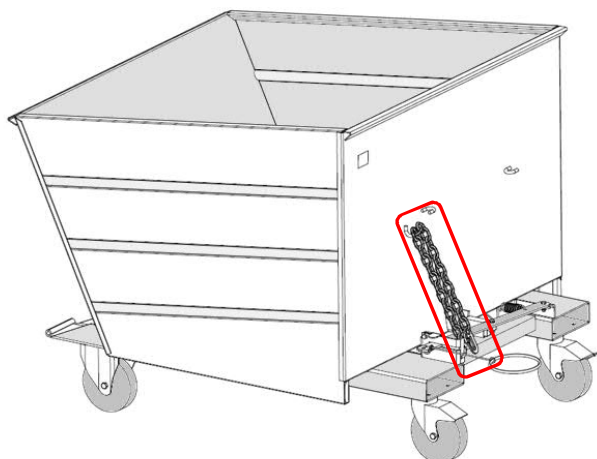


Fig. 2-1: Safety chain on the container

2.3.3 Signage on the machine

Warning symbols/product safety labels are attached to the danger points of the machine according to the following overview.

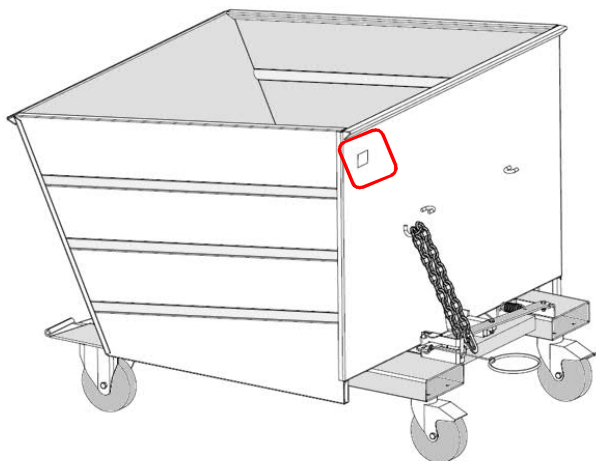


Fig. 2-2: Position of the warning symbols/product safety labels

Operating Instructions

- Tilting container -



3 Description of the container

3.1 Intended use

The Tilting container is exclusively for gathering loose materials in a container. A ground-level transport vehicle (forklift) is required for transport and unloading. A cable pull on the tilting container serves to trigger the tilting process from the ground-level transport vehicle.

Optional accessories:

Containers with casters are designed for moving by hand.

The single-side opening cover acts to protect against ingress by foreign substances and the release of contained goods during transport.

The tilt brake functions as an adjustable traction damper during controlled tilting of the container.

The Tilting container is to be used exclusively within the performance limits listed in section 3.5 "Technical data".

3.2 Improper use

Improper use includes in particular:

- Any use other than the use of the machine described as "Intended use" in sec. 3.1 and further sections of these operating instructions without written permission of the manufacturer.
- Use, installation, operation, maintenance or repair other than as described.
- Work performed by unqualified personnel.
- Use of unapproved, inappropriate accessories.
- Failure to follow safety and operating instructions, occupational safety and accident prevention regulations or applicable statutory regulations.
- Failure to eliminate faults in a timely fashion that could negatively impact safety.
- Use of parts other than the original spare parts or accessory items.
- Operating the machine with incomplete safety equipment.
- Operation with a forklift or the like as a "lifting platform".
- Transport of persons in the Tilting container.
- Use of the container in its tilted state as a "shovel".
- Operation of the container in potentially explosive areas.

3.3 Structure, function and operating modes

3.3.1 Overview

The following overview shows an example of the individual assemblies, based on the Tilting container type VD.

Operating Instructions

- Tilting container -

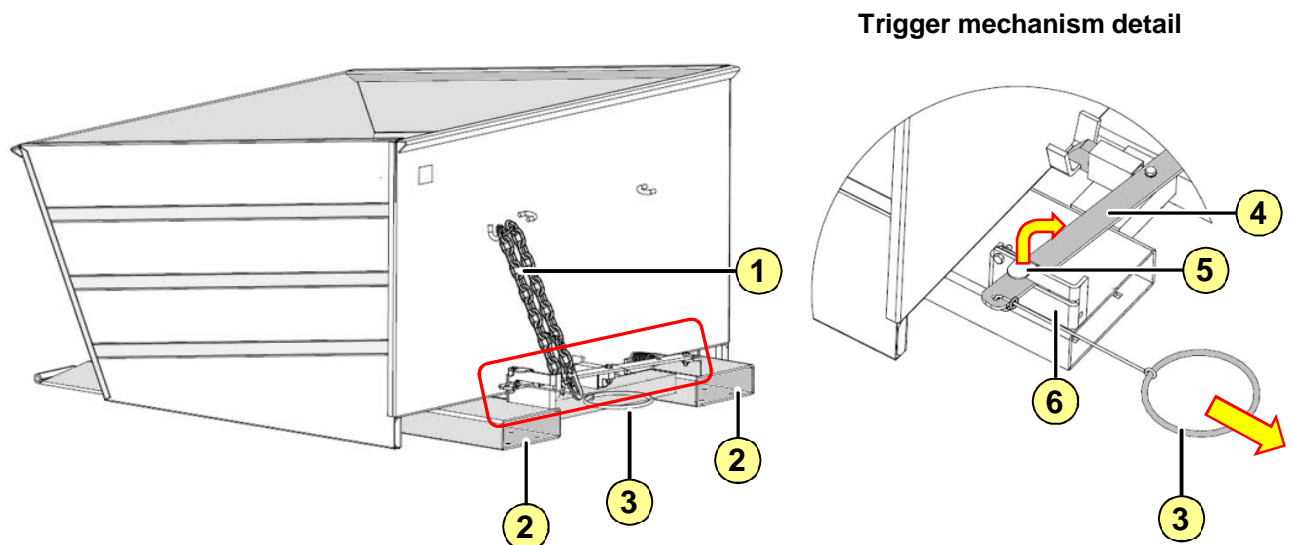


Fig. 3-1: Tilting container VD assemblies

| Item | Description |
|------|-------------------------------------|
| 1 | Fastening chain with carabiner |
| 2 | Fork pockets |
| 3 | Operating cable |
| 4 | Unlocking lever for tilting process |
| 5 | Locking |
| 6 | Guide plate, unlocking lever |

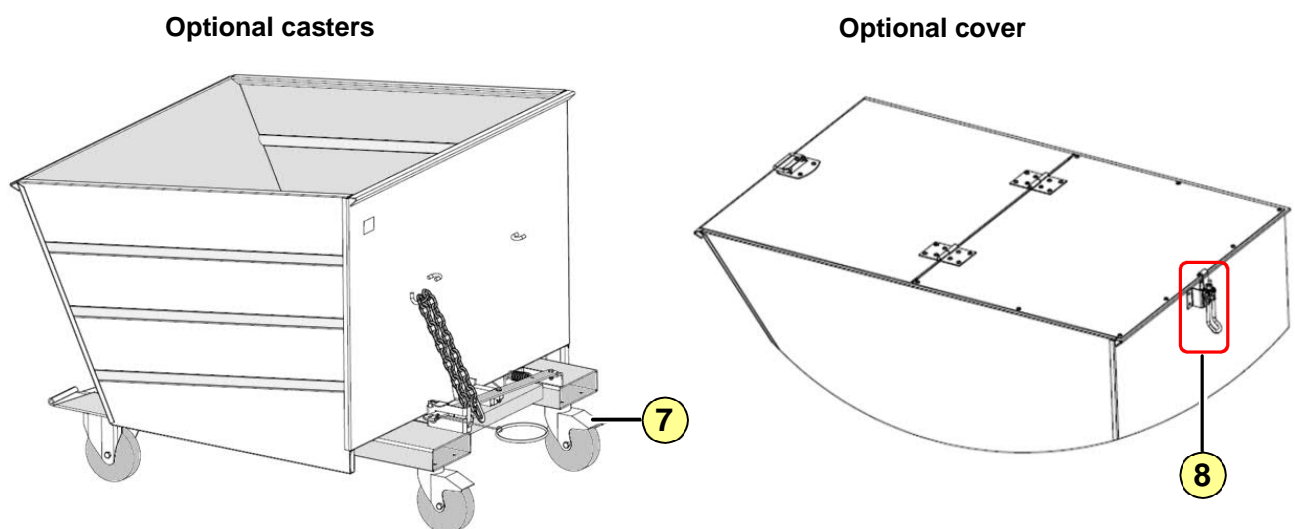


Fig. 3-2: Optional assemblies

| Item | Description |
|------|---|
| 7 | Caster with lock (casters are optional) |
| 8 | Clamp fastener (cover is optional) |

Operating Instructions

- Tilting container -



3.3.2 Operating modes

The following operating modes are defined:

| Operating mode | Description |
|----------------|--|
| Loading | Filling with material; the container stands on the floor |
| Transport | Transporting and emptying the container |

3.4 Operating materials and media supply

Operating materials and media such as electricity, hydraulic or pneumatic power supply are not necessary for operation.

3.5 Technical data

| Dimensions | Type | VD 500 | VD 650 | VD 800 | VD 1000 |
|--|------|--------------------|-----------|-----------|-----------|
| Length [mm] | | 1370 | 1440 | 1370 | 1440 |
| Width [mm] | | 800 | 800 | 1200 | 1200 |
| Height [mm] | | 730 | 890 | 730 | 890 |
| Volume [m ³] | | 0.50 | 0.65 | 0.80 | 1.00 |
| Weight | | | | | |
| Tare weight, painted / galvanised [kg] | | 117 / 126 | 125 / 134 | 137 / 147 | 151 / 162 |
| Load-bearing capacity [kg] | | 750 | 1000 | 1000 | 1500 |
| Environmental conditions | | | | | |
| Permissible ambient temperature | | -20°C to max. 40°C | | | |

| Dimensions | Type | VG 550 | VG 700 | VG 900 | VG 1100 |
|--|------|--------------------|-----------|-----------|-----------|
| Length [mm] | | 1370 | 1440 | 1370 | 1440 |
| Width [mm] | | 800 | 800 | 1200 | 1200 |
| Height [mm] | | 730 | 890 | 730 | 890 |
| Volume [m ³] | | 0.55 | 0.70 | 0.90 | 1.00 |
| Weight | | | | | |
| Tare weight, painted / galvanised [kg] | | 125 / 134 | 133 / 143 | 150 / 161 | 163 / 175 |
| Load-bearing capacity [kg] | | 750 | 1000 | 1000 | 1500 |
| Environmental conditions | | | | | |
| Permissible ambient temperature | | -20°C to max. 40°C | | | |

Operating Instructions

- Tilting container -



3.6 Machine marking



Note

The year of manufacture and the manufacturer's number can be found in the type plate of the Tilting container. This data is not noted in the operating instructions.

The manufacturer's number is listed in the order.

| | | | |
|---|----------------------|------------------|----------------------|
| | | | |
| Typ | <input type="text"/> | ESP | <input type="text"/> |
| Herstell-Nr. | <input type="text"/> | LSP | <input type="text"/> |
| Baujahr | <input type="text"/> | Vorbaumaß | <input type="text"/> |
| Inhalt | <input type="text"/> | stapelbar | <input type="text"/> |
| Eigengewicht | <input type="text"/> | hydr. Druck min. | <input type="text"/> |
| Tragfähigkeit | <input type="text"/> | max. | <input type="text"/> |
| Achtung: Tragfähigkeit der Kombination von Flurförderzeug und Anbaugerät einhalten! | | | |

Fig. 3-3: Tilting container type plate

4 Setup and commissioning

The container is delivered in completely assembled form, is ready for operation without special commissioning and can be transported with the specified lifting equipment (forklift, ground-level transport vehicle).

Before initial use, the operator checks whether the container corresponds to the model ordered and that the scope of delivery is complete. A qualified person must perform a visual inspection as part of commissioning.

Operating Instructions

- Tilting container -



5 Operation

5.1 Safety notes



DANGER!

Persons in the transport and movement area of the container and forklift!

Risk of fatal injury and crushing hazard when transporting and tilting the container and due to the material being dumped.

- Never step underneath the raised container!
- Exercise particular caution when driving backwards.
- Only move the container under direct visual supervision, even when driving backwards; the driving area must be completely visible!
- If unobstructed visibility is not possible, have a second person located outside the danger zone provide guidance.
- Before dumping, check whether it is possible to dump without danger and ensure that persons maintain a sufficient safe distance.
- Trigger the tilting operation **ONLY** with the pulling equipment provided for this purpose.



DANGER!

Use of prohibited lifting equipment may cause container to fall!

Risk of fatal injury and crushing hazard in the movement area of the container.

- Crane transport is only allowed if the container is equipped with crane lugs.
- For crane transport, only use permissible, undamaged lifting equipment and accessories with sufficient load-bearing capacity.
- For transport with a forklift, the forks must be inserted completely into the fork pockets.



DANGER!

Transport of persons in the Tilting container!

Risk of fatal injury due to crashing and being hurled from the container.

- Transporting persons in the container is prohibited.



WARNING!

Permissible load-bearing capacity of the forklift and bearing surface is exceeded!

Risk of fatal injury and crushing hazard due to container and forklift tipping over.

- Observe the permissible load-bearing capacity of the forklift.
- The operator must ensure the load-bearing capacity of the bearing surface at the placement location and on the transport routes!
- Take the slope of the bearing surface into account during transport and placement.

Operating Instructions

- Tilting container -



5.2 Operation of Tilting container

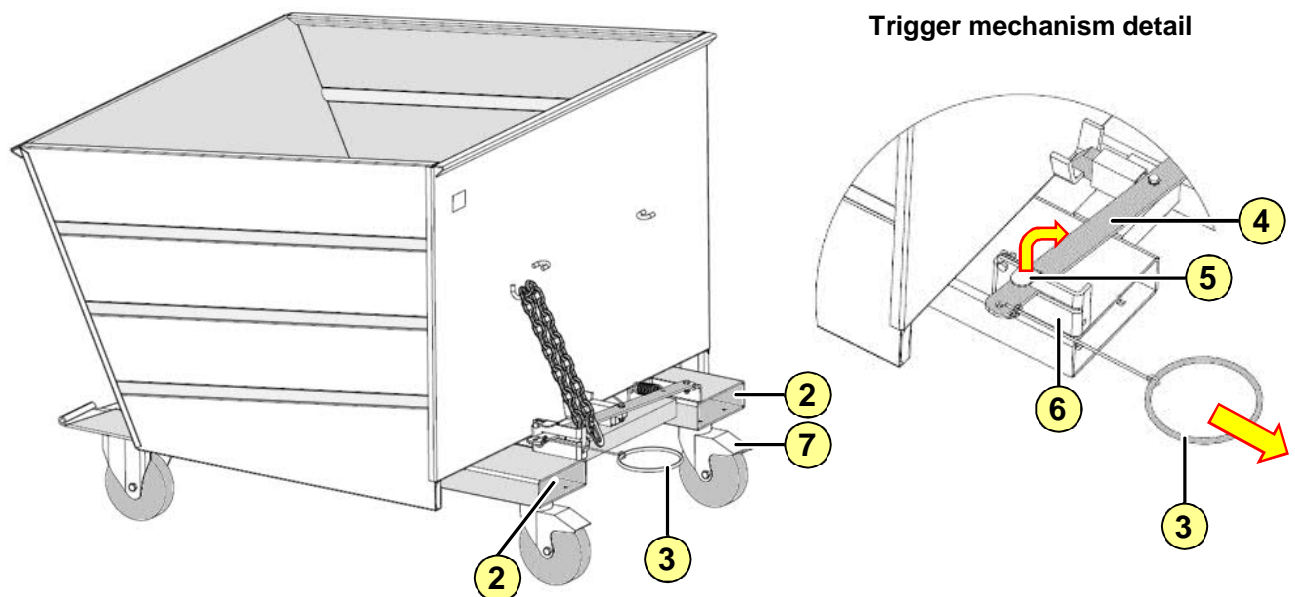


Fig. 5-1: Operation of Tilting container

- (1) Container with casters: Activate the caster lock (7).
- (2) Align mast of forklift vertically.
- (3) Adjust forklift forks to match the distance between the fork pockets (2).
- (4) Drive the forks up to the end of the provided fork pockets (2) of the frame.

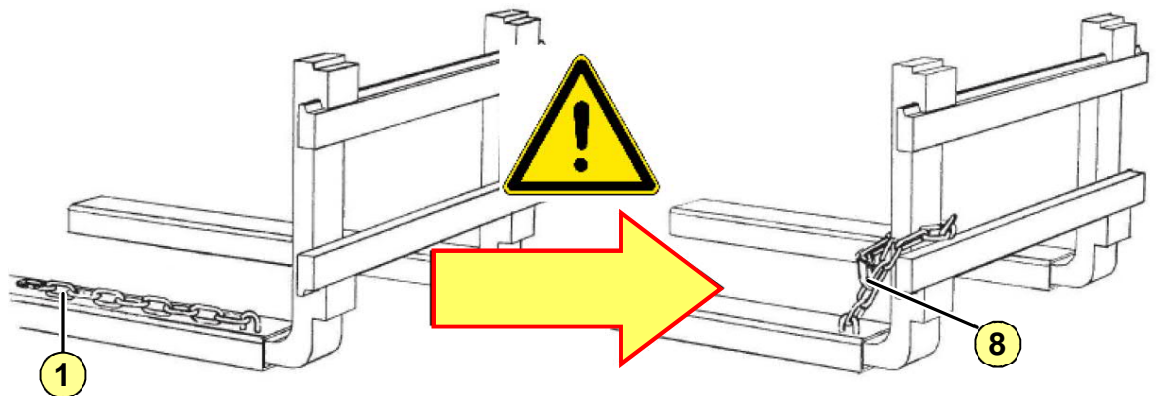


Fig. 5-2: Operation of Tilting container

- (5) Place the fastening chain (1) of the container around the fork carriage/back of the fork.
- (6) Hook the carabiner (8) into a link of the chain in order to secure the fastening chain (1).

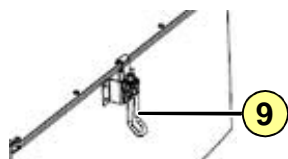


Fig. 5-3: Secure cover

Operating Instructions

- Tilting container -



- (7) In case of containers with a cover: Open the front cover part and secure it with the clamp fastener (9).
- (8) Lift the container with the mast of the forklift and drive to the location of use.
- (9) Immediately before emptying flip the locking mechanism (5) on the guide plate (6) (see detail).
- (10) Take off and unwind the operating cable (3) from the hook.
- (11) Lift the container to the desired height.
- (12) Pull the operating cable (3) to trigger the unlocking lever (4).
⇒ The container empties itself independently.
- (13) Lower the mast until the container tilts back and latches into the base position again.
- (14) Place the locking mechanism (5) over the guide plate (6),
- (15) Roll up the operating cable (3) and hang it from the hook.
- (16) Lift the container and drive back to its set-down place, put the container down.
ATTENTION: Only place container on level surface. On a sloped surface, there is a danger of the container slipping or falling over.
- (17) Open the carabiner (8) of the fastening chain (1), remove the chain from the forklift and hook the carabiner back into a link of the chain.
- (18) Drive the forklift backwards until the fork pockets (2) release the forks.
- (19) Container with casters: Activate the caster lock (7).

5.3 Adjusting the tilting speed

This setting is only possible with the “tilt brake” option.

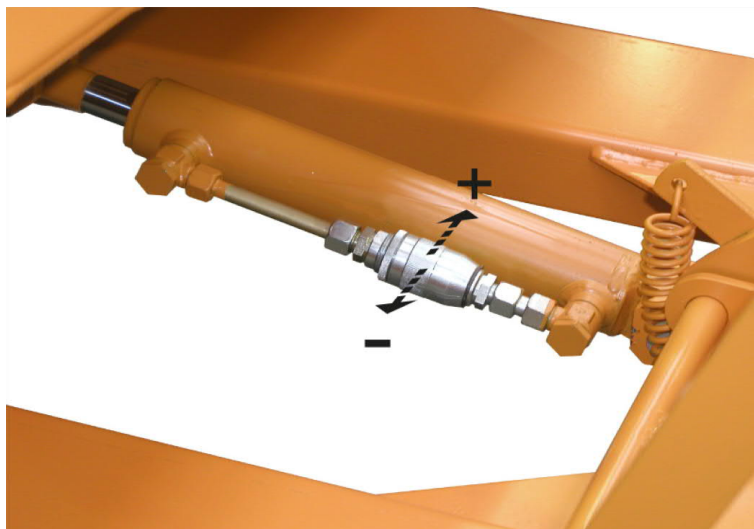


Fig. 5-4: Adjust tilting speed of Tilting container

Operating Instructions

- Tilting container -



- (1) Adjust the tilting speed with the adjustable throttle:
- “+”: Increase tilting speed
 - “-”: Decrease tilting speed

6 Troubleshooting and fault elimination

6.1 Safety



WARNING!

Improper fault elimination can lead to serious personal injury or property damage.

- Ensure sufficient free space for assembly before starting the work.
- Ensure order and cleanliness at the assembly location! Loose components and tools in piles or left lying around are sources of accidents.
- If components have been removed, ensure correct assembly, reattach all fasteners and observe bolt tightening torques.

6.2 Characteristic faults and elimination of them by the operator

After unusual incidents, the Tilting container must be visually inspected by a qualified person, even outside of the specified inspection periods.

The Tilting container must be checked for mechanical damage, and the supervisor must be informed if applicable.

7 Servicing

7.1 Safety



WARNING!

Servicing and repair work performed improperly can lead to various risks of injury!

- Have repair work performed only by authorised personnel.
- Use specified spare parts.
- Exercise particular caution when protective equipment is deactivated.

7.2 Maintenance

7.2.1 Maintenance plan and work (operator)

Any parts that have become defective and must be replaced during maintenance can be found on the assembly drawing.

Inspection and maintenance checklist

| Frequency | Object | Activity |
|-----------|------------------|---|
| Daily | Entire container | Check for wear and defects of the container Verify proper function |

Operating Instructions

- Tilting container -



| Frequency | Object | Activity |
|-----------|----------------------------|---|
| Daily | Fastening chain, carabiner | Verify presence and completeness and check for defects |
| Monthly | Entire container | Check for wear, permanent deformation and corrosion that negatively impacts the function or load-bearing capacity |

7.2.2 Maintenance plan and work (specialist personnel)

The following maintenance work must only be performed by specialist personnel of BAUER or an authority commissioned by BAUER.

| Object | Activity |
|------------------|--|
| Entire container | Inspection by qualified person (in accordance with BetrSich [Industrial Safety Ordinance] sec. 10 and 11)* |
| Safety equipment | Inspection by qualified person |

*All inspections must be documented. Forklift attachments with identified defects must be de-commissioned immediately.

7.3 Repair

Repairs of the Tilting container must be performed exclusively by the manufacturer or authorities commissioned by it.

Only original spare parts must be used.

8 Decommissioning, disassembly and disposal

No special requirements on decommissioning, disassembly and disposal exist.

9 Spare parts list



Ordering spare parts:

Bauer GmbH
Eichendorffstr. 62
D-46354 Südlohn
Tel.: +49 2862 709 – 0
Fax: +49 2862 709 – 156
Email: info@bauer-suedlohn.de

All the information you need for ordering spare parts can be found in the spare parts list. To process your order quickly, we need the following information:

- our spare part item number

Operating Instructions

- Tilting container -



- our spare part item name
- order quantity
- name of the container, manufacturing number and year of manufacture

10 Appendix

10.1 Declaration of conformity

The declaration of conformity is included in the delivery in the machine documentation.