


Montageanleitung:

Instruction sheet - Notice de montage -
instrukcja użytkowania - installatie-instructies

sw-500.105, sw-700.105, sw-700.106



1x

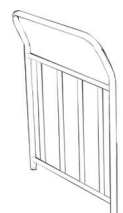

1x

M12
25mm



2x



1x


Schiebebügelwagen mit senkrechten Rohren

Push bar trolley with vertical tubes

Chariot à dossier tubulaire avec tubes verticaux

Wózek z pałąkiem z pionowymi rurami


Magazijnwagen met verticale buizen

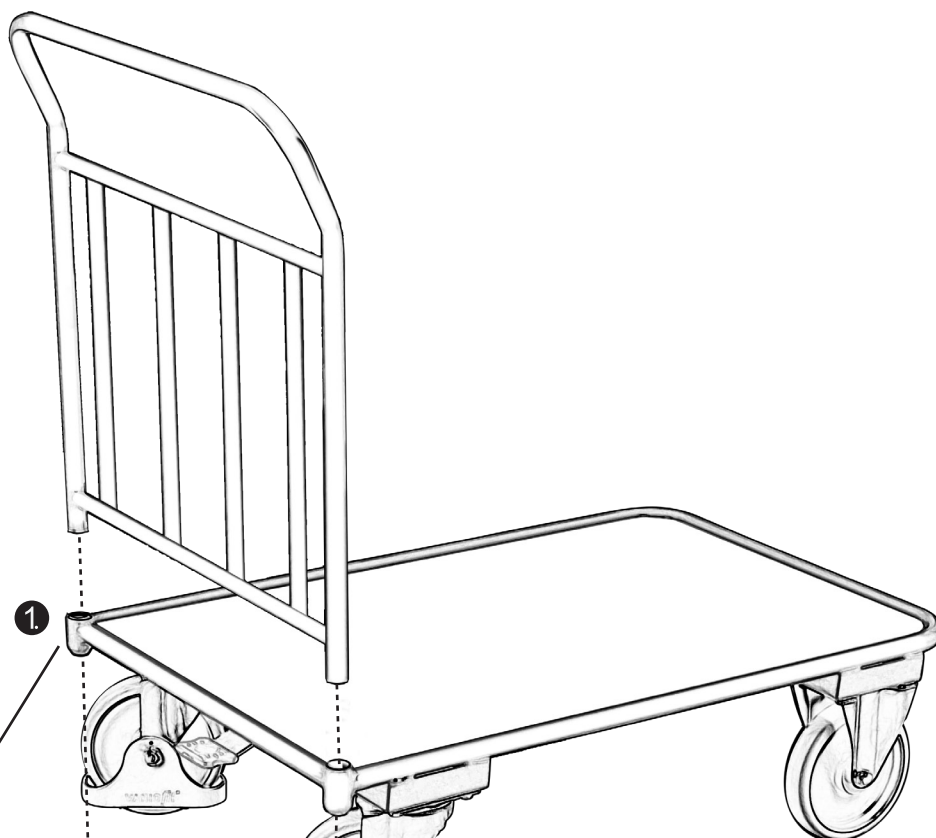

1

M12
25mm

M12
25mm

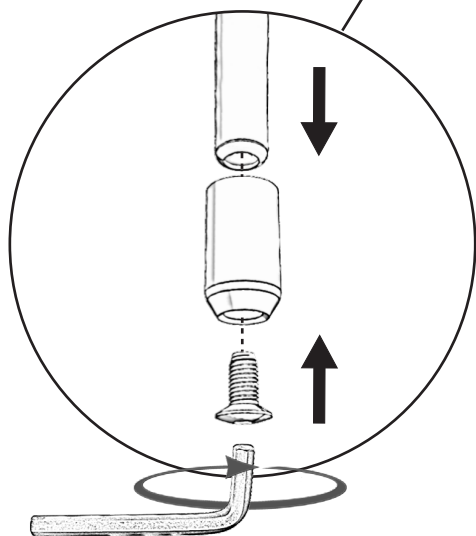

VARIOfit[®]