



Operating Instructions

- Tilting Container -



Original Operating Instructions

Tilting Container

Type BK



Bauer Südlohn GmbH
Eichendorffstr. 62
D-46354 Südlohn
Tel.: +49 2862 709 – 0
Fax: +49 2862 709 – 156
Email: info@bauer-suedlohn.de

www.bauer-suedlohn.de
www.geotainer.com

Operating Instructions

- Tilting Container -



Copyright

The operating instructions are protected by copyright for Bauer Südlohn GmbH. They are intended for maintenance and operating personnel. The text, images and drawings of a technical nature they contain may not be

- duplicated,
- distributed,
- used without authorisation for other purposes or shared with others, either in full or in part.

Any further use requires the prior written permission of Bauer Südlohn GmbH. Section 106 of the German Copyright Act (UrhG – Gesetz über Urheberrecht und verwandte Schutzrechte) applies in cases of violation. All misuse is punishable.

Internal use is permitted for the operator of the machine in connection with the operation of the machine.

© Bauer GmbH 2019

History

V 1.1	24/10/2019	Correction	NHO
V 1.0	26/09/2019	Customer version, publication	BKL, cesitec GmbH, Bochumer Str. 217, 45886 Gelsenkirchen, Tel.: 0209 15519 100
Version	Date	Reason for/scope of the revision	Person responsible

Operating Instructions

- Tilting Container -



Table of contents

	Page
1 Basic information	4
1.1 Information on the operating instructions	4
1.2 Abbreviations, symbols and technical terms	4
1.3 Conformity / standards and guidelines	5
1.4 Warranty and liability	5
2 Safety at the machine	5
2.1 Definitions	5
2.2 Warnings, symbols and markings.....	6
2.3 Working safely with the machine	7
3 Description of the Tilting Container	10
3.1 Intended use	10
3.2 Improper use.....	11
3.3 Structure, function and operating modes	11
3.4 Operating materials and media supply	14
3.5 Technical data	15
4 Setup and commissioning.....	17
5 Operation.....	17
5.1 Safety information.....	17
5.2 Transport Tilting Container with the forklift	18
5.3 Transporting the hydraulic Tilting Container	21
5.4 Transport Tilting Container with the crane	23
6 Troubleshooting and fault elimination	26
6.1 Safety.....	26
6.2 Characteristic faults and elimination of them by the operator	26
7 Maintenance.....	27
7.1 Safety.....	27
7.2 Servicing	27
7.3 Repair	28
8 Decommissioning, disassembly and disposal.....	28
9 Spare parts list	28
10 Appendix	28
10.1 Declaration of conformity	28

Operating Instructions

- Tilting Container -



1 Basic information

1.1 Information on the operating instructions

- It is necessary to read through the operating instructions carefully before starting any work and store them in the immediate vicinity of the system, accessible to the authorised personnel at all times. The operator of the machine determines who is authorised as a user.
- The operating instructions provide information about:
 - description of the dangers and instructions for safe handling of the machine,
 - the intended use,
 - the structure and description of the components,
 - the functionality of the machine,
 - measures to establish operational readiness and operational safety,
 - the operation of the machine,
 - the maintenance and testing of the machine.
- They are a component of the machine and therefore must be supplied with the machine.
- For better explanation, illustrations may be shown not to scale and differ from the actual model.

1.2 Abbreviations, symbols and technical terms



Note

The Note symbol is used to identify information on operation of the machine and provides useful tips and recommendations, as well as information for efficient, economical, fault-free operation.

The following abbreviations are used in these operating instructions:

Abbreviation	Meaning
Bauer	Bauer Südlohn GmbH
PPE	Personal protective equipment
Container	Tilting Container with rolling function

The following layout elements are used in these operating instructions:

Symbol	Meaning
(1)	Numbered action steps
⇒	Result after performing action steps
•	Enumeration
-	Enumeration, subgroup
<i>Italic text</i>	Indicates preconditions that must be fulfilled before an action description
Chapter <i>number + title</i>	Refers to a section in this manual or further applicable documents

Operating Instructions

- Tilting Container -



Warnings are shown as follows in these operating instructions:

Each signal word is highlighted in a background colour (red, orange or yellow) according to the degree of risk of the hazardous situation.

Warning
symbol
opt. PPE
symbol(s)

SIGNAL WORD!

Nature, source and cause of a danger

Consequences of non-compliance

➤ Measures to prevent the danger; prohibitions

1.3 Conformity / standards and guidelines

This machine has been designed and built according to state-of-the-art technology and recognised safety regulations. Conformity of the machine with the EU guidelines and standards is confirmed through the CE declaration.

1.4 Warranty and liability



Note

Conformity in accordance with the Machinery Directive 2006/42/EC and the CE marking in accordance with the Machinery Directive 2006/42/EC become invalid if unauthorised alterations of the components or their assemblies are made.

The manufacturer assumes no liability for damage due to failure to follow these operating instructions.

2 Safety at the machine



Note

This machine has been designed and built according to state-of-the-art technology and recognised safety regulations. Nonetheless, dangers to the life and limb of the user or third parties or negative effects on the machine or other property can occur during use.

2.1 Definitions

2.1.1 Warning

A warning is used to warn of a situation that can lead to injury or death.

2.1.2 Personal protective equipment (PPE)

If personal protective equipment (PPE) is required to be worn, this is indicated through additional symbols in the warnings of these operating instructions and the product safety labels/safety signs on the machine.

Operating Instructions

- Tilting Container -



2.2 Warnings, symbols and markings

2.2.1 Understand warnings



⚠ DANGER!

... refers to a dangerous situation with a high degree of risk that will lead to death or serious injury if not prevented.



⚠ WARNING!

... refers to a dangerous situation with a medium degree of risk that could lead to death or serious injury if not prevented.



⚠ CAUTION!

... refers to a dangerous situation with a low degree of risk that could lead to slight or moderate injury if not prevented.



ATTENTION

... refers to a possibly dangerous situation that can lead to property damage if not prevented.

2.2.2 Understand warning symbols

The following symbols can be used in the operating instructions according to the type of danger:



General warning of danger!



Warning: Suspended load!



Warning: Danger of crushing!



Warning: Obstacles on the floor!

Operating Instructions

- Tilting Container -



2.2.3 Personal protective equipment symbols

The following symbols can be used in the operating instructions according to the area of use:



Wear helmet!



Use hand protection!



Wear safety shoes!

2.3 Working safely with the machine

The following section “*Basic warnings and safety notes*” deals with all warnings and safety notes for all stages of the machine’s life cycle. Warnings that are associated directly with an activity are an exception to this.

2.3.1 Information for the operator

This operating manual must be stored within easy reach and readily available at the operating site of the Tilting Container.

Local accident prevention regulations must be applied to all work on the machine.

Persons involved with the machine must be older than 18 years of age and familiar with the functionality of the machine and the dangers arising from the machine.

The respective personnel must have received instruction on the task, and must be familiar with the operating manual, as well as any further applicable internal instructions.

2.3.2 Basic warnings and safety notes



⚠ DANGER!

Unauthorised alterations of the tilting container can endanger safe operation!

Risk of death and various injury hazards!

- Do not perform unauthorised design changes; all changes must be discussed with and approved by Bauer.
- Modifications of the protective/safety equipment.

Operating Instructions

- Tilting Container -



DANGER!

Risk of fatal injury and various risks of injury

Besides the safety notes in these operating instructions, the safety notes in the operating instructions of the supplier must be observed!



WARNING!

Tilting containers that are stacked on top of each other can tip over!

Risk of fatal injury and crushing hazard due to tilting containers tipping over.

- The tilting containers must not be stacked.



WARNING!

Insufficient lighting or visibility!

Danger of various types of injury.

- The operator is responsible for sufficient lighting in the working and transport areas!
- Operation of the container with insufficient lighting or visibility (fog) is prohibited.



WARNING!

For additional purchased components, the manufacturer's indications must be observed!



CAUTION!

Risk of injury due to slipping, tripping and falling!

- Do not leave any materials or tools lying on walkways or driveways.
- Immediately absorb/remove oil and other slippery materials in walking areas; use oil binding agents.

2.3.3 Recognise safety-related protective equipment

On the basis of the risk assessment of the machine, a safety chain is integrated in order to ensure safe work with the machine.



DANGER!

Unintentional falling/toppling of the container!

Various risks of injury due to material tipping out/toppling container.

- Always connect the fastening chain to the carrier before lifting the container.
- Remove the locking ring just before the tipping process.



Fig. 2-1: Safety chain on the Tilting Container

2.3.4 Signage on the Tilting Container

Warning symbols/product safety labels are attached to the danger points of the machine according to the following overview.



Fig. 2-2: Position of the warning symbols/product safety labels

Operating Instructions

- Tilting Container -



2.3.5 Machine marking



Note

The year of manufacture and the manufacturer's number can be found on the type plate of the Tilting Container, on the rear wall. This data is not noted in the operating instructions.

Typ	<input type="text"/>	ESP	<input type="text"/>
Herstell-Nr.	<input type="text"/>	LSP	<input type="text"/>
Baujahr	<input type="text"/>	Vorbaumaß	<input type="text"/>
Inhalt	<input type="text"/>	stapelbar	<input type="text"/>
Elengewicht	<input type="text"/>	hydr. Druck min.	<input type="text"/>
Tragfähigkeit	<input type="text"/>	max.	<input type="text"/>
Achtung: Tragfähigkeit der Kombination von Flurförderzeug und Anbaugerät einhalten!			

Fig. 2-3: Tilting Container type plate

3 Description of the Tilting Container

3.1 Intended use

The Tilting Container with rolling function is intended exclusively for gathering loose materials or chips in a container. The safety device to prevent unintentional slipping and tilting can be released with a cable pull. Support from a ground-level transport vehicle (forklift) is required for transport and unloading.

The hydraulic Tilting Container version is intended for supporting the tilting process.

The optional accessory "castors" for the Tilting Container are intended for transport with a towing device or for manual transport.

The optional accessory "coupling device with tow bar" facilitates transport with a trailer coupling.

The optional accessory "crane lugs" facilitates transport with a crane.

In the special "rolling lever" version, the Tilting Container can be transported with a rolling lever.

The Tilting Container is to be used exclusively within the performance limits listed in section 3.5 *Technical data*.

Operating Instructions

- Tilting Container -



3.2 Improper use

Improper use includes in particular:

- Any use other than the use of the machine described in chapter 3.1 *Intended use* and further sections of these operating instructions without written permission of the manufacturer.
- Use, installation, operation, servicing or repair other than as described.
- Work performed by unqualified personnel.
- Use of unapproved, inappropriate accessories.
- Failure to follow safety and operating instructions, occupational safety and accident prevention regulations or applicable statutory regulations.
- Failure to eliminate faults in a timely fashion that could negatively impact safety.
- Use of parts other than the original spare parts or accessories.
- Operating the machine with incomplete safety equipment.
- Operation with a forklift or the like as a "lifting platform".
- Transport of persons in the tilting container.
- Use of the tilting container in its tilted state as a "shovel".
- Operation of the tilting container in potentially explosive areas.

3.3 Structure, function and operating modes

The Tilting Container BK can be equipped with the following accessories:

- Cover, opens on 2 sides
- Castors, 2 steering and fixed castors respectively, one steering castor lockable
- Coupling device with tow bar
- Retainer for rolling lever type B2
- Crane lugs

Operating Instructions

- Tilting Container -



3.3.1 Overview Tilting Container BK


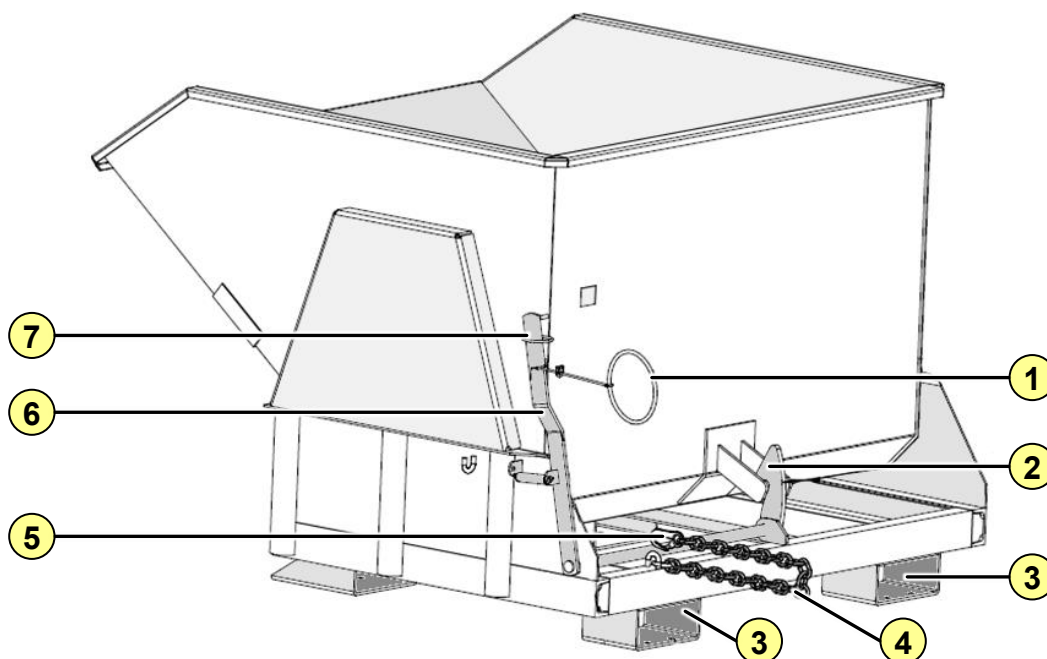


Fig. 3-1: Tilting Container BK assemblies

Item	Description
1	Operating cable
2	Locking hook
3	Fork pockets
4	Fastening chain
5	Carabiner
6	Unlocking lever
7	Locking ring

Operating Instructions

- Tilting Container -

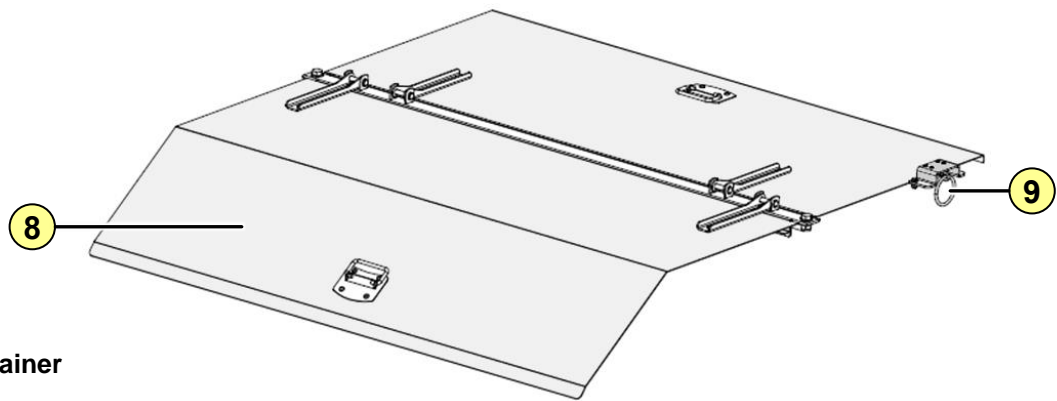


**Tilting container
cover**


BK-R 30-100

BK-R 110-120

BK-R 130-200

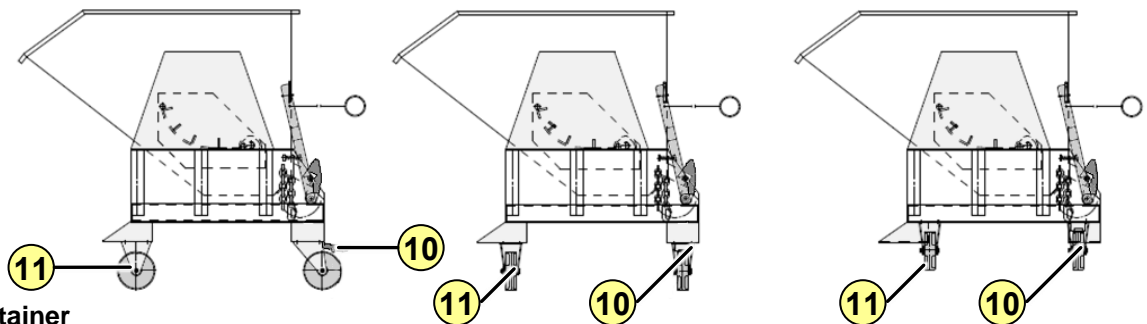

**Tilting container
with castors**

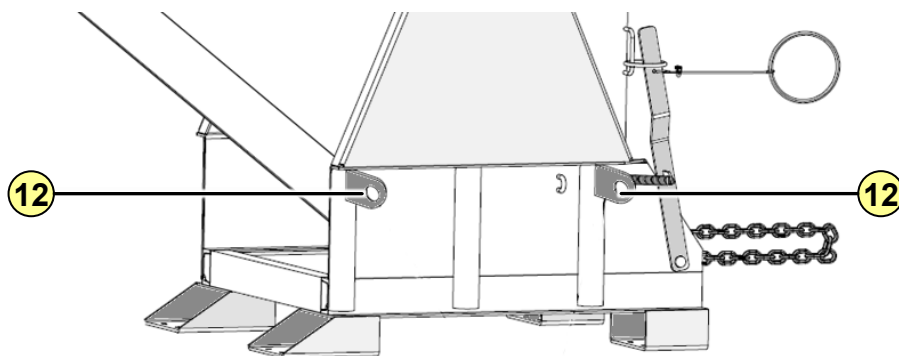

**Tilting container
with crane lugs**

Fig. 3-2: Tilting Container BK optional assemblies

Item	Description
8	(Optional) cover
9	Cover locking mechanism (optional cover)
10	Steering castor with lock (castors are optional)
11	Fixed castor (castors are optional)
12	Crane lugs

Operating Instructions

- Tilting Container -

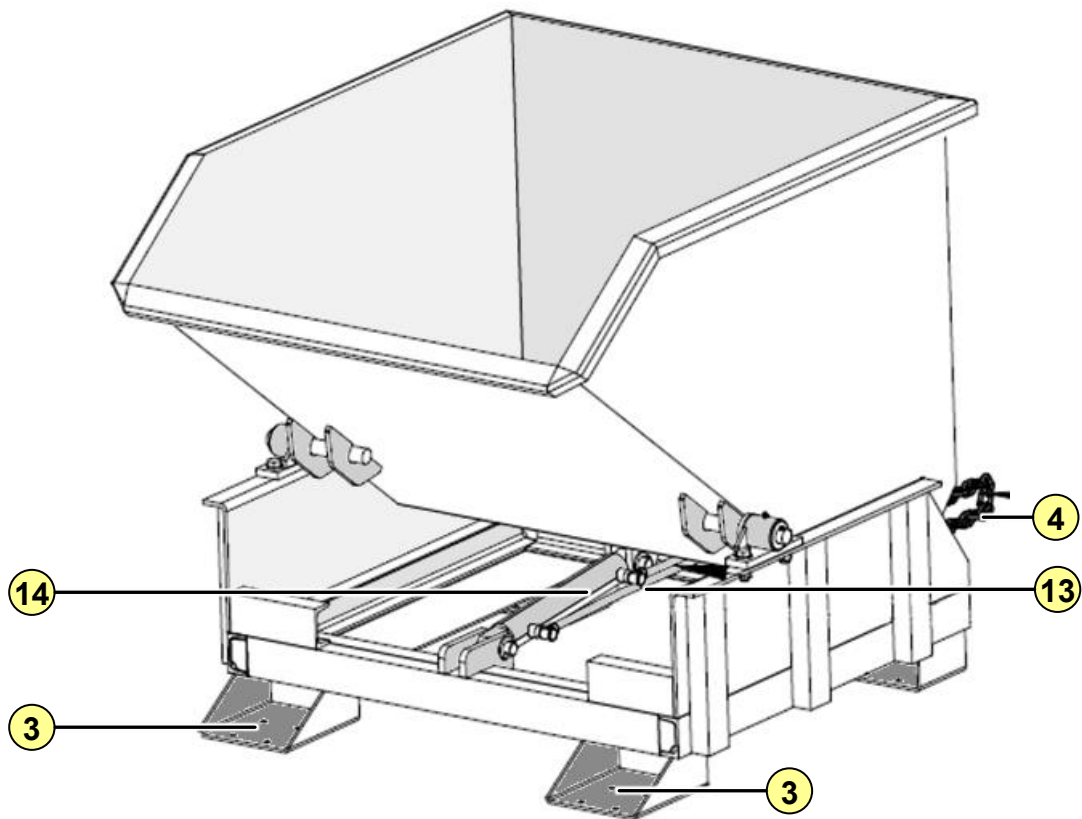


Fig. 3-3: Tilting Container BK-H assemblies

Item	Description
13	Hydraulic hoses
14	Hydraulic cylinder

3.3.2 Operating modes

The following operating modes are defined:

Operating mode	Description
Loading	Filling with material; the container stands on the floor
Transport	Transporting the container

3.4 Operating materials and media supply

Operating materials and media such as electricity, hydraulic or pneumatic power supply are not necessary for operation.

Operating Instructions

- Tilting Container -



3.5 Technical data

3.5.1 Tilting container BK

Dimensions	Type	BK 30	BK 50	BK 60	BK 70	BK 80	BK 90
Length [mm]		1170	1455	1455	1455	1455	1455
Width [mm]		850	850	950	1050	1150	1250
Height [mm]		945	1070	1070	1070	1070	1070
Volume [m ³]		0.30	0.50	0.60	0.70	0.80	0.90
Weight							
Tare weight, painted [kg]		144	198	206	214	238	246
Tare weight, galvanised [kg]		155	213	222	230	255	265
Load-bearing capacity [kg]		750	1000	1000	1000	1500	1500
Environmental conditions							
Permissible ambient temperature		-20°C to max. 40°C					

Dimensions	Type	BK 100	BK 110	BK 120	BK 130	BK 140	BK 150
Length [mm]		1455	1455	1455	1455	1455	1455
Width [mm]		1400	1550	1650	1750	1850	1950
Height [mm]		1070	1070	1070	1070	1070	1070
Volume [m ³]		1.00	1.10	1.20	1.30	1.40	1.50
Weight							
Tare weight, painted [kg]		256	264	276	280	287	317
Tare weight, galvanised [kg]		275	284	297	301	309	341
Load-bearing capacity [kg]		2000	2000	2000	2000	2000	2000
Environmental conditions							
Permissible ambient temperature		-20°C to max. 40°C					

Dimensions	Type	BK 160	BK 1700	BK 180	BK 190	BK 200	
Length [mm]		1455	1455	1455	1455	1640	
Width [mm]		2050	2150	2250	2350	2150	
Height [mm]		1070	1070	1070	1070	1170	
Volume [m ³]		1.60	1.70	1.80	1.90	2.00	
Weight							
Tare weight, painted [kg]		330	336	346	350	381	
Tare weight, galvanised [kg]		355	361	373	377	410	
Load-bearing capacity [kg]		2000	2000	2000	2000	2000	
Environmental conditions							
Permissible ambient temperature		-20°C to max. 40°C					

Operating Instructions

- Tilting Container -



3.5.2 Tilting container BK-H

Dimensions	Type	BK-H 30	BK-H 50	BK-H 60	BK-H 70	BK-H 80	BK-H 90
Length [mm]		1040	1320	1320	1320	1320	1320
Width [mm]		900	900	1000	1100	1200	1300
Height [mm]		1030	1155	1155	1155	1155	1155
Volume [m ³]		0.30	0.50	0.60	0.70	0.80	0.90
Weight							
Tare weight, painted [kg]		127	181	189	195	215	227
Tare weight, galvanised [kg]		136	194	202	210	231	245
Load-bearing capacity [kg]		750	1000	1000	1000	1500	1500
Environmental conditions							
Permissible ambient temperature		-20°C to max. 40°C					

Dimensions	Type	BK-H 100	BK-H 110	BK-H 120	BK-H 130	BK-H 140	BK-H 150
Length [mm]		1320	1320	1320	1320	1320	1320
Width [mm]		1450	1600	1700	1800	1900	2000
Height [mm]		1155	1155	1155	1155	1155	1155
Volume [m ³]		1.00	1.10	1.20	1.30	1.40	1.50
Weight							
Tare weight, painted [kg]		237	245	257	261	268	298
Tare weight, galvanised [kg]		255	264	277	281	289	321
Load-bearing capacity [kg]		2000	2000	2000	2000	2000	2000
Environmental conditions							
Permissible ambient temperature		-20°C to max. 40°C					

Dimensions	Type	BK-H 160	BK-H 170	BK-H 180	BK-H 190	BK-H 200	
Length [mm]		1320	1320	1320	1320	1530	
Width [mm]		2100	2200	2300	2400	2200	
Height [mm]		1155	1155	1155	1155	1265	
Volume [m ³]		1.60	1.70	1.80	1.90	2.00	
Weight							
Tare weight, painted [kg]		311	217	327	331	362	
Tare weight, galvanised [kg]		335	341	353	357	390	
Load-bearing capacity [kg]		2000	2000	2000	2000	2000	
Environmental conditions							
Permissible ambient temperature		-20°C to max. 40°C					

Operating Instructions

- Tilting Container -



4 Setup and commissioning

The Tilting Container is delivered in completely assembled form, is ready for operation without special commissioning and can be transported with the specified lifting equipment (forklift).

Before initial use, the operator checks whether the Tilting Container corresponds to the model ordered and that the scope of delivery is complete. A qualified person must perform a visual inspection as part of commissioning.

5 Operation

5.1 Safety information



DANGER!

Persons in the transport and movement area of the container and forklift!

Risk of fatal injury and crushing hazard when transporting and tilting the container and due to the material being dumped.

- Never step underneath the raised container and make sure that persons maintain a sufficient safe distance!
- Never transport load over individuals.
- Exercise particular caution when driving backwards.
- Only move the tilting container under direct visual supervision, even when driving backwards; the driving area must be completely visible!
- If unobstructed visibility is not possible, have a second person located outside the danger zone provide guidance.
- Before dumping, check whether it is possible to dump without danger and ensure that persons maintain a sufficient safe distance.
- Trigger the tilting operation **ONLY** with the pulling equipment provided for this purpose.



DANGER!

Use of prohibited lifting equipment may cause container to fall!

Risk of fatal injury and crushing hazard in the movement area of the container.

- Crane transport is not allowed because the container is not equipped with crane lugs.
- For transport with a forklift, the forks must be inserted completely into the fork pockets.
- Observe the information about the intended attachment points and centre of mass!



DANGER!

Transport of persons in the Tilting Container!

Risk of fatal injury due to crashing and being ejected from the container.

- Transporting persons in the container is prohibited.

Operating Instructions

- Tilting Container -



⚠ WARNING!

Permissible load-bearing capacity of the forklift and bearing surface is exceeded!

Risk of fatal injury and crushing hazard due to container and forklift tipping over.

- Observe the permissible load-bearing capacity of the forklift.
- The operator must ensure the load-bearing capacity of the bearing surface at the placement location and on the transport routes!
- Take the slope of the bearing surface into account during transport and placement.



⚠ WARNING!

Negligent use of personal protective equipment!

Injuries due to crushing and bumping.

- Wear PPE (protective gloves, safety footwear) when working with the Tilting Container.

5.2 Transport Tilting Container with the forklift

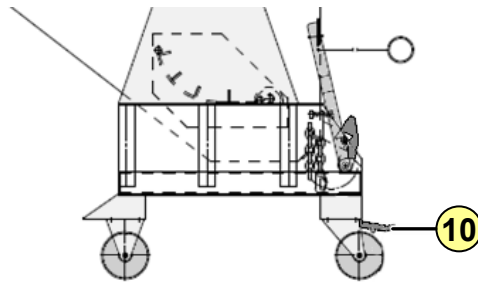


Fig. 5-1: Transport Tilting Container

- (1) Container with steering castors: Activate the steering castor lock (10).

Operating Instructions

- Tilting Container -

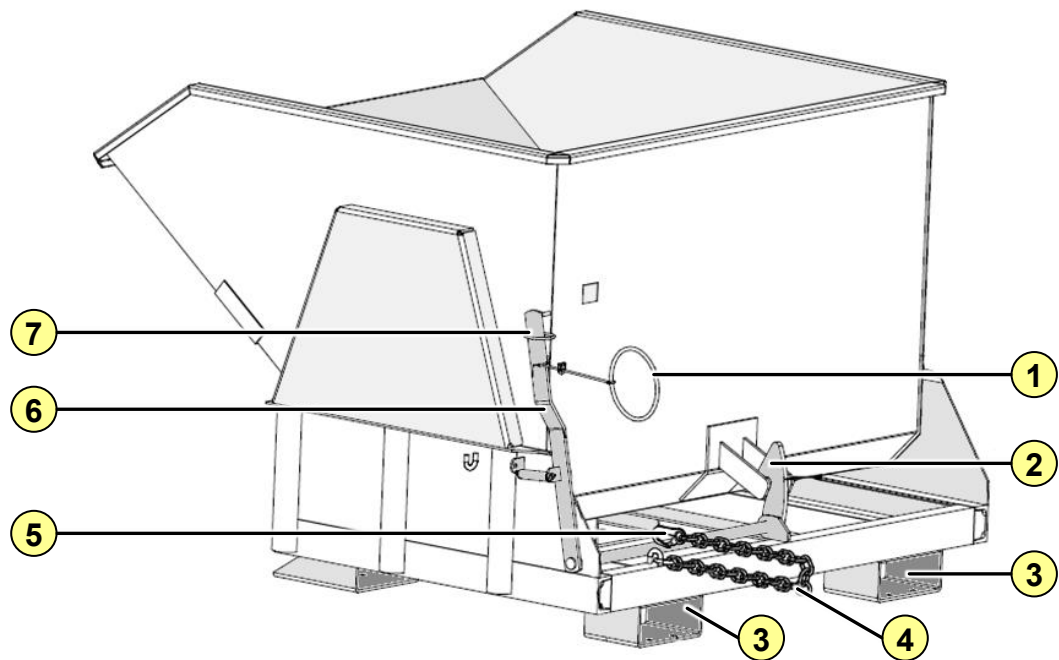


Fig. 5 2: Transport Tilting Container

- (2) Align mast of forklift vertically.
- (3) Adjust forklift forks to match the distance between the fork pockets (3).
- (4) Drive the forks up to the end of the intended fork pockets (3) of the frame.

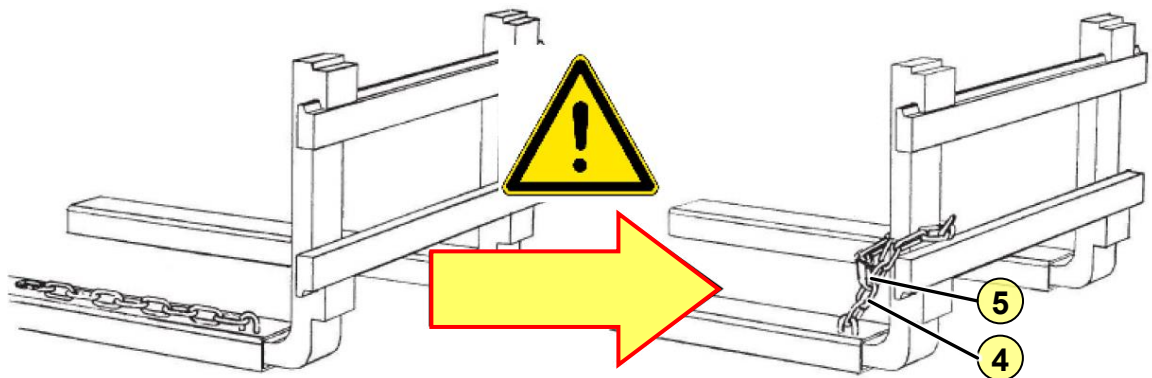


Fig. 5 3: Secure Tilting Container

- (5) Pull the fastening chain (4) of the container tight around the fork carriage/back of the fork.
- (6) Hook the carabiner (5) into a link of the chain in order to secure the fastening chain (4).

Operating Instructions

- Tilting Container -

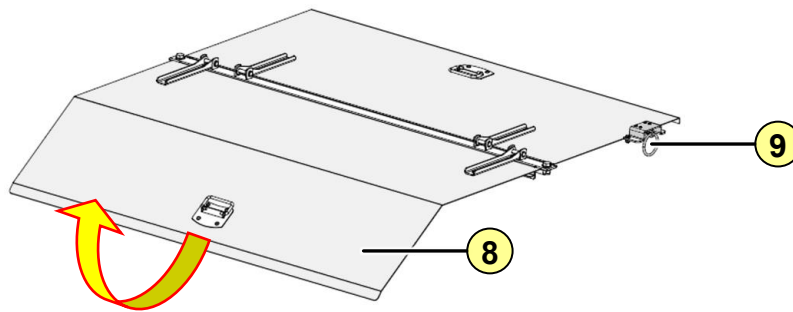


Fig. 5 4: Open cover Tilting Container

- (7) In case of containers with a cover (8): Open the front cover part and secure it with the cover locking mechanism (9).
- (8) Lift the container with the mast of the forklift and drive to the location of use.
- (9) Immediately before emptying, remove the locking ring (7) from the unlocking lever (6).
- (10) Take off and unwind the operating cable (1) from the hook.
- (11) Lift the container to the desired height.
- (12) Tilt the mast of the forklift forwards.
- (13) Pull the operating cable (1) to trigger the unlocking lever (6).
 - ⇒ Locking hook (2) releases the container.
 - ⇒ Container tilts and empties itself independently.
- (14) Tilt the mast back towards the forklift truck, until the container tilts back and latches into the base position again.
- (15) Lower the mast.
- (16) Place the locking ring (7) over the unlocking lever (6).
- (17) Roll up the operating cable (1) and hang it from the hook.
- (18) Lift the container, drive back to its set-down place and put the container down.

ATTENTION: Only place container on level surface. On a sloped surface, there is a danger of the container slipping or falling over.
- (19) Open the carabiner (5) of the fastening chain (4), remove the chain from the forklift and hook the carabiner back into a link of the chain.
- (20) Drive the forklift backwards until the fork pockets (3) release the forks.
- (21) In case of containers with a cover (8): release the cover locking mechanism (9) and close the front cover (8).

Operating Instructions

- Tilting Container -



5.3 Transporting the hydraulic Tilting Container

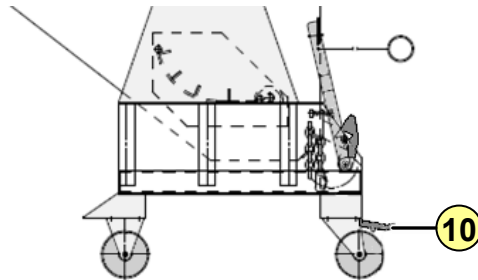


Fig. 5-1: Lock Tilting Container steering castor

- (1) Container with steering castors: Activate the steering castor lock (10).

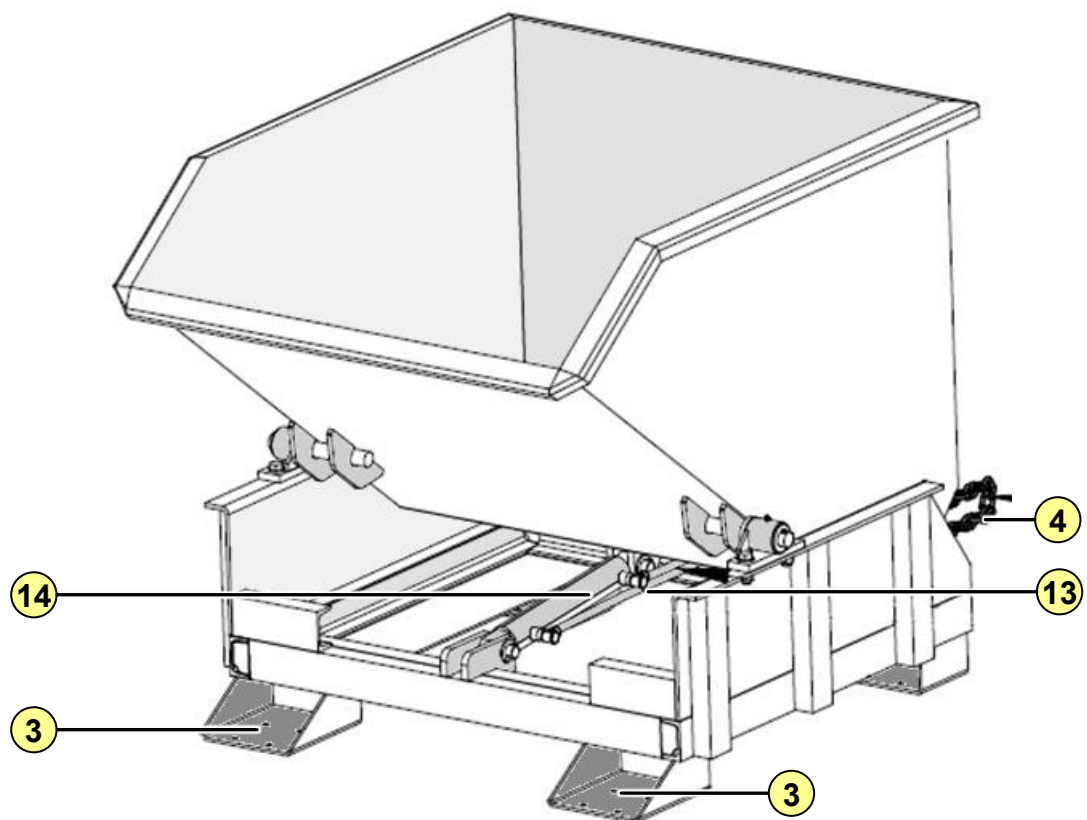


Fig. 5 2: Transport Tilting Container

- (2) Align mast of forklift vertically.
- (3) Adjust forklift forks to match the distance between the fork pockets (3).
- (4) Drive the forks up to the end of the intended fork pockets (3) of the frame.

Operating Instructions

- Tilting Container -

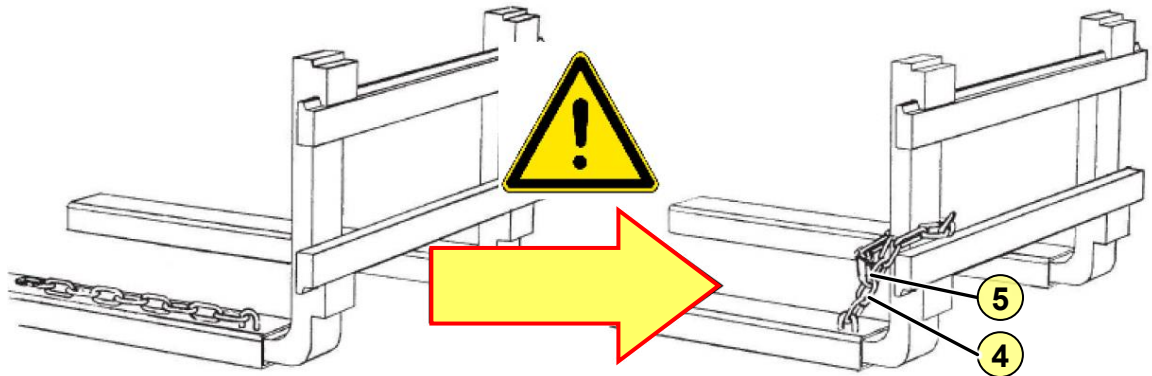


Fig. 5 3: Secure Tilting Container

- (5) Pull the fastening chain (4) of the container tight around the fork carriage/back of the fork.
- (6) Hook the carabiner (5) into a link of the chain in order to secure the fastening chain (4).

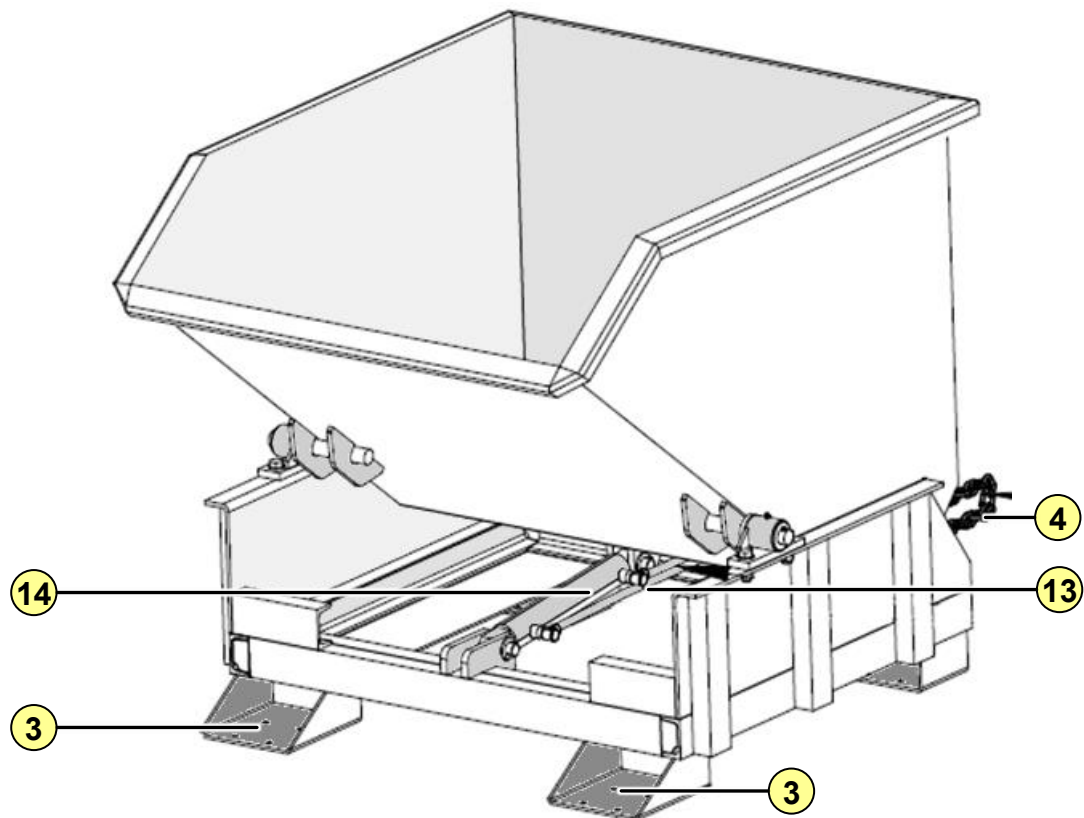


Fig. 5-4: Transport Tilting Container, hydraulic

WARNING!



Risk of injury due to spurting hydraulic oil under high pressure!

- Securely fasten the hydraulic lines on the forklift truck.
- The hydraulic operating pressure must not exceed max. 250 bar.

- (7) Connect the hydraulic hoses (13) of the tilting container to the hydraulic system of the forklift truck.

Operating Instructions

- Tilting Container -

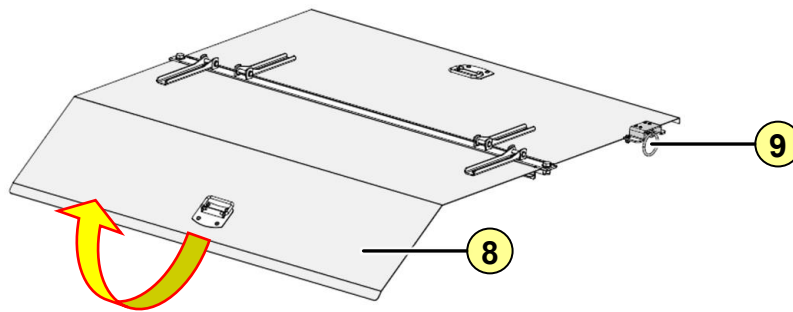


Fig. 5 5: Open cover Tilting Container

- (8) In case of containers with a cover (8): Open the front cover part and secure it with the cover locking mechanism (9).
- (9) Lift the container with the mast of the forklift and drive to the location of use.
- (10) Lift the container to the desired height.
- (11) Trigger the tilting process at the control unit on the forklift.
 - ⇒ Container tilts and empties itself independently.
- (12) Bring the container basin back into the starting position with the help of the control unit.
- (13) Lower the mast and drive back to the set-down place, put the container down.
 - ATTENTION: Only place container on level surface. On a sloped surface, there is a danger of the container slipping or falling over.
- (14) Open the carabiner (5) of the fastening chain (4), remove the chain from the forklift and hook the carabiner back into a link of the chain.
- (15) Drive the forklift backwards until the fork pockets (3) release the forks.
- (16) In case of containers with a cover (8): release the cover locking mechanism (9) and close the front cover (8).

5.4 Transport Tilting Container with the crane

Requirements:

The container must be equipped with crane lugs (12) for crane transport.

Operating Instructions

- Tilting Container -



⚠ WARNING!



Uncontrolled movements of the container due to fastening, lifting and moving incorrectly!

Risk of fatal injury and crushing hazard in the movement area.

- Only use tested and technically faultless lifting equipment.
- Attach lifting accessories only to the crane lugs.
- Observe maximum specified weights.
- Always attach lifting accessories in such a way that the load-handling attachment is located vertically above the centre of mass (avoid eccentric centre of mass).
- Make sure the suspension cables do not undershoot an angle of 60° to the horizontal.
- Do not attach cables and straps to sharp corners and edges, kink them or twist them.
- Lift the container carefully and observe whether the load tilts. If necessary, correct the attachment.
- Adjust the movement of the container to the weather conditions.



Notes

- Lock the steering castor prior to crane transport.
- The Tilting Container attached to the crane with the lifting equipment cannot be tilted!

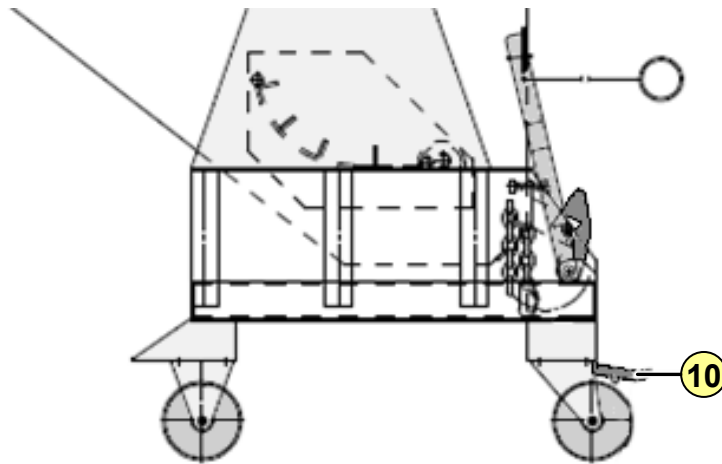


Fig. 5-6: Preparing the Tilting Container for crane transport

- (1) Container with steering castors: Activate the steering castor lock (10).

Operating Instructions

- Tilting Container -

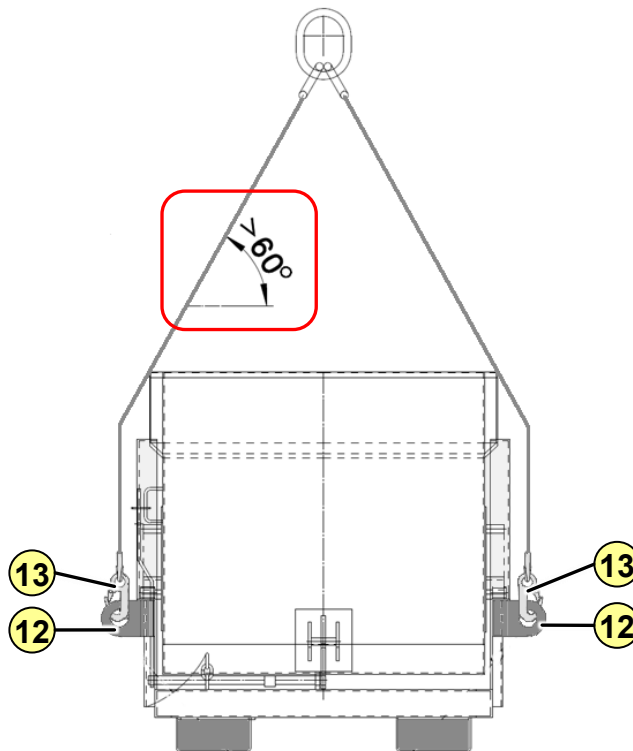


Fig. 5-7: Crane transport Tilting Container

- (2) Attach the lifting equipment to the crane lugs (12) with the hook lock (13).

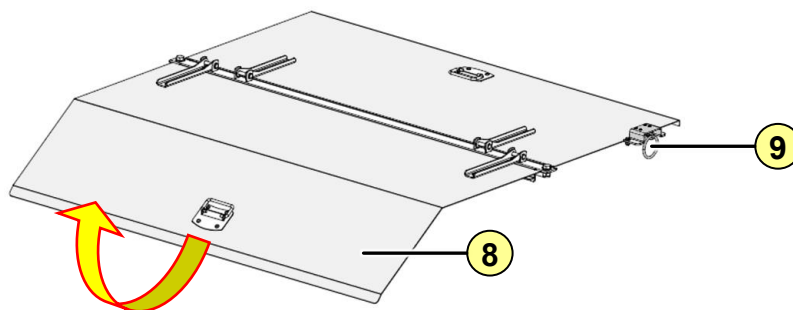


Fig. 5 8: Open cover Tilting Container

- (3) In case of containers with a cover (8): Open the front cover part and secure it with the cover locking mechanism (9).
- (4) Lift the container with the lifting gear and drive to the location of use.
- (5) Immediately before emptying, remove the locking ring (7) from the unlocking lever (6).
- (6) Take off and unwind the operating cable (1) from the hook.
- (7) Lift the container to the desired height by means of a crane.
- (8) Pull the operating cable (1) to trigger the unlocking lever (6).
- ⇒ Locking hook (2) releases the container.
- ⇒ Container tilts and empties itself independently.

Operating Instructions

- Tilting Container -



WARNING!

Risk of crushing due to container tilting back.

- Do not stand inside the movement range of the container and locking hook.

- (9) After completely emptying the container, set it down in the floor and swivel the container basin back into the loading position by hand.
- (10) Place the locking ring (7) over the unlocking lever (6).
- (11) Roll up the operating cable (1) and hang it from the hook.
- (12) Lift the container, drive back to its set-down place and put the container down.
ATTENTION: Only place container on level surface. On a sloped surface, there is a danger of the container slipping or falling over.
- (13) Open the hook lock (13) of the lifting equipment and remove from the crane lugs (12).

6 Troubleshooting and fault elimination

6.1 Safety



WARNING!

Improper fault elimination can lead to serious personal injury or property damage.

- Ensure sufficient free space for assembly before starting the work.
- Ensure order and cleanliness at the assembly location! Loose components and tools in piles or left lying around can cause accidents.
- If components have been removed, ensure correct assembly, reattach all fasteners and observe bolt tightening torques.

6.2 Characteristic faults and elimination of them by the operator

After unusual incidents, the Tilting Container must be visually inspected by a qualified person, even outside of the specified inspection periods.

The Tilting Container must be checked for mechanical damage, and the supervisor must be informed if applicable.

Operating Instructions

- Tilting Container -



7 Maintenance

7.1 Safety



⚠ WARNING!

Servicing and repair work performed improperly can lead to various risks of injury!

- Have repair work performed only by authorised personnel.
- Use specified spare parts.
- Particular caution should be exercised when safety equipment has been deactivated.

7.2 Servicing

7.2.1 Maintenance plan and work (operator)

Any parts that have become defective and must be replaced during maintenance can be found on the assembly drawing.

Inspection and maintenance checklist

Frequency	Object	Activity
Daily	Entire container	Check for wear and defects of the container Verify proper function
Daily	Fastening chain	Verify presence and completeness and check for defects
Monthly	Entire container	Check for wear, permanent deformation and corrosion that negatively impacts the function or load-bearing capacity
Monthly	Hydraulic unit	Leak-tightness and damage to the hydraulic cylinder and lines.

7.2.2 Maintenance plan and work (specialist personnel)

The following maintenance work must only be performed by specialist personnel of Bauer or an authority commissioned by Bauer.

Object	Activity
Entire container	Inspection by qualified person (in accordance with BetrSich [Industrial Safety Ordinance] sec. 10 and 11)*
Safety equipment	Inspection by qualified person

*All inspections must be documented. Forklift attachments with identified defects must be de-commissioned immediately.

Operating Instructions

- Tilting Container -



7.3 Repair

Repairs of the Tilting Container must be performed exclusively by the manufacturer or authorities commissioned by it.

Repair work on the hydraulic unit must only be performed by persons who possess the knowledge and skills necessary for this.

Only original spare parts must be used.

8 Decommissioning, disassembly and disposal

No special requirements on decommissioning, disassembly and disposal exist.

9 Spare parts list



Ordering spare parts:

Bauer GmbH
Eichendorffstr. 62
D-46354 Südlohn
Tel.: +49 2862 709 – 0
Fax: +49 2862 709 – 156
Email: info@bauer-suedlohn.de

To process your order quickly, we need the following information:

- our spare part item number
- our spare part item name
- order quantity
- name of the container, manufacturing number and year of manufacture

10 Appendix

10.1 Declaration of conformity

The declaration of conformity is included in the delivery in the machine documentation.